Installation Tips

BEFORE YOU BEGIN


- 1. Read these instructions and check to be sure all parts and tools are accounted for.
- 2. Please retain these installation instructions for future reference and parts ordering information.

IMPORTANT


- 1. Please read the installation instructions carefully before you start.
- 2. If the vehicle is clean and free of other debris, it will be easy to install.
- 3. For your safety and to ensure a satisfactory installation, please complete all the installation steps in the order shown below.

PRODUCT INFORMATION:

| 1. LH Guard Plate | x1 |
|-------------------|----|
| 2. RH Guard Plate | x1 |
| 3. M6 x 12 Screw | x2 |
| 4. M5 x 12 Screw | x4 |
| 5. M5 Nut | x4 |
| | |

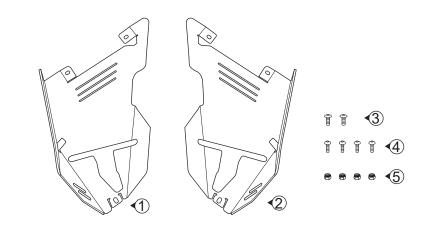

INSTALLATION TIPS:

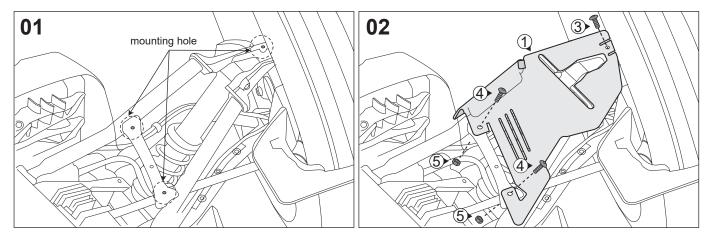

- 1. Locate the mounting holes beneath the A-arm.
- 2. Install LH guard plate [1] with one M6 screw [3], two M5 screws [4] and two M5 nuts [5].
- 3. Repeat step 1-2 for RH guard plate [2] installation.

B0201-01101BK