

# UNDERSEAT STORAGE BIN FOR HONDA PIONEER 1000

ZP-YJ-030908-001

## BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT


This UNDERSEAT STORAGE BIN is exclusively designed for your PIONEER. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Referring to the Service Manual for the vehicle, remove the seat, the rubber cover, and the left side cover.

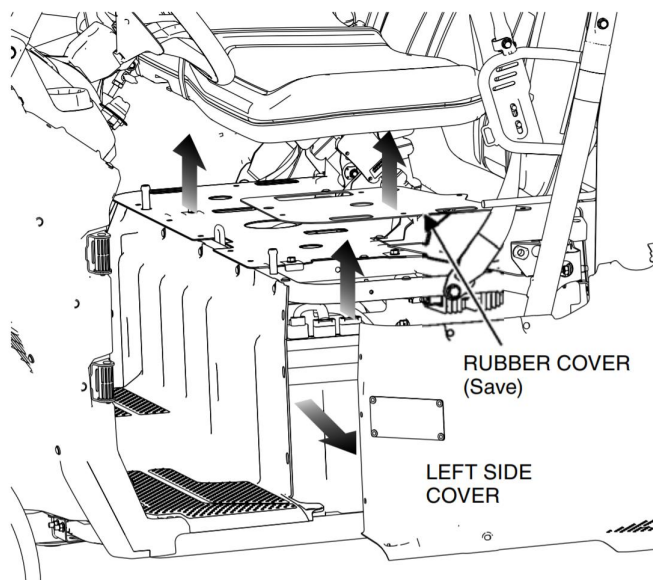

3. Slide the box bottom in from the side opening and insert the box flange through the opening under the seat.

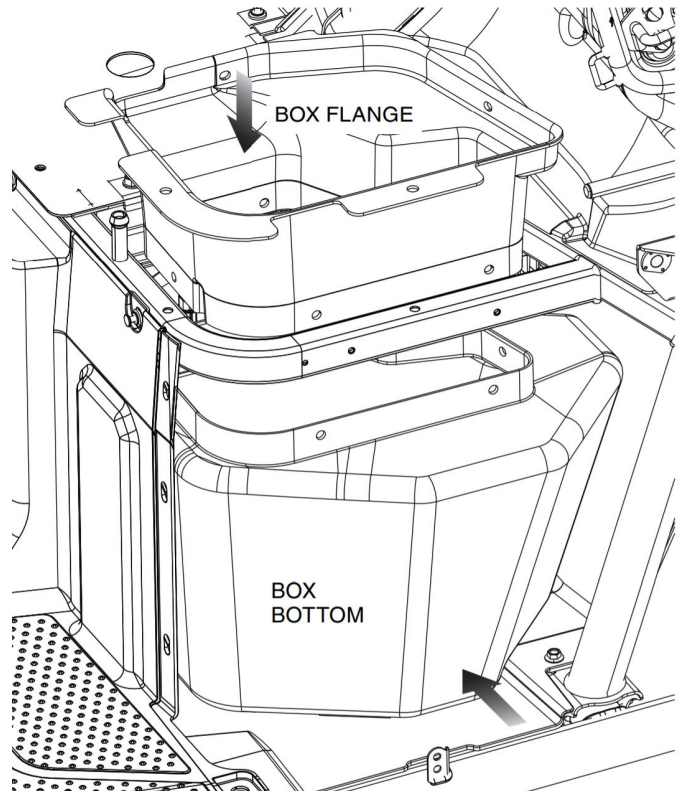


4. Align the holes between the box bottom and the box flange and connect them together with seven trim clips as shown.


Align the holes between the assembled box and the under seat frame and connect the box assembly to the frame with four trim clips as shown.

# UNDERSEAT STORAGE BIN FOR HONDA PIONEER 1000

ZP-YJ-030908-001

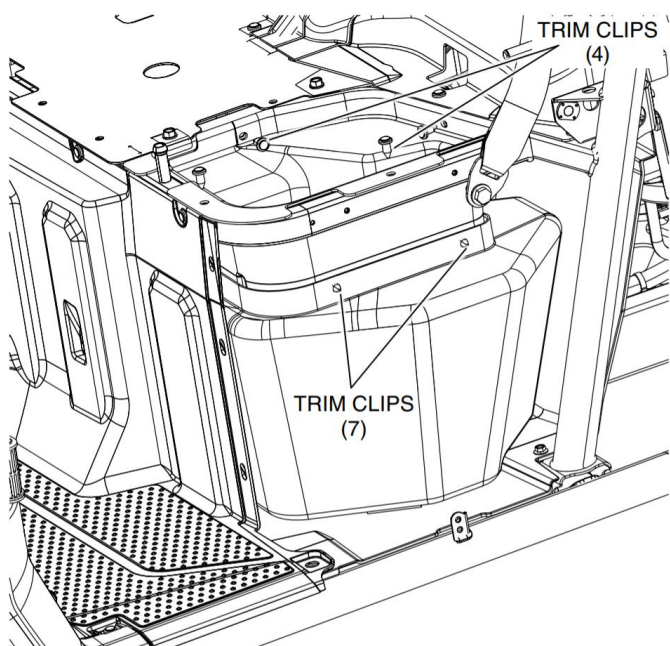

5. Install the shoulder bolt into the bracket on the support pipe by passing it through the rubber seal in the bottom of the box as shown. Tighten the shoulder bolt to the specification in the torque chart.

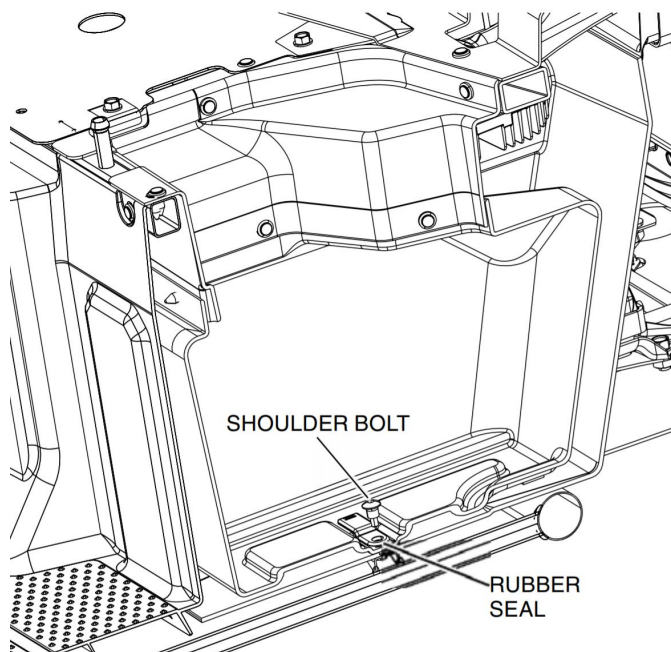

6. Referring to the Service Manual for the vehicle, re-install the seat and the left side cover using the original hardware set aside in Step 2.

The rubber cover will not be used when the under seat storage is installed.