

Taillight for Yamaha Raptor YFZ

ZP-YJ-031101-001



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This Taillight is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Pictures of products.



2. First open the seat cushion of the vehicle (the key of the seat is at the bottom of the taillight) remove the decoration plate of the rear wing (remove the fixed screws on both sides below the decorative plate first) as shown in the picture:





3. After the decorative board is removed, remove the two screws that fixed the original taillight, for later use, and unplug the wiring harness plug-ins of the original taillight, as shown in the picture:

Taillight for Yamaha Raptor YFZ

ZP-YJ-031101-001



normally, as shown in the picture:

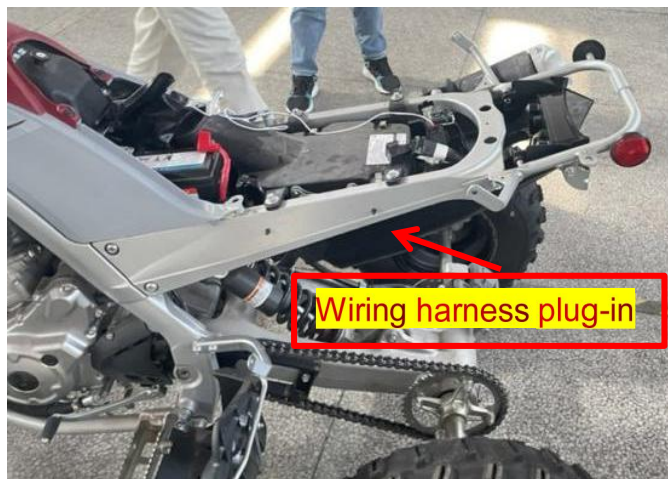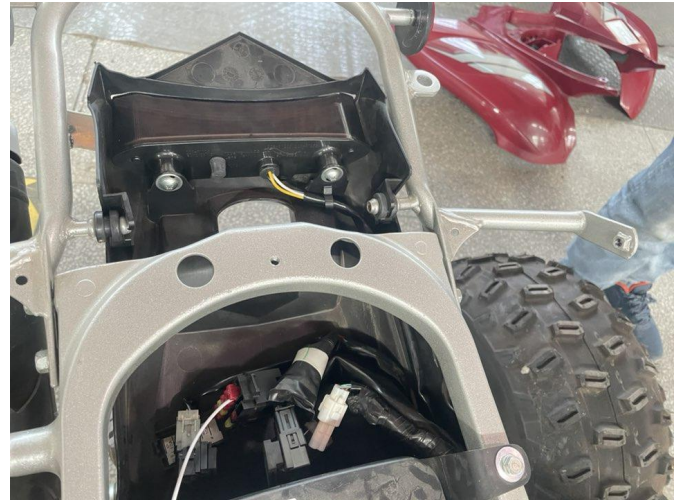

5. After the installation of the taillight, assemble the tail decoration plate and cushion on the vehicle, and the installation completes! As shown in picture:



4. Install the new taillight in the same way as removing the original taillight, connect the wiring harness plug-ins (after the wiring harness is connected, start the vehicle to check whether it is powered on), and fix the taillight with screws after confirming that it can work