

Tire Wheel Hub Caps for Polaris

ZP-YJ-030503-098



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This hub cap is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product picture.



3. First remove the original hub caps and reinstall the new hub caps.
(Note: When installing, you need to press hard so that the bayonet on the hubcap is fully seated in the hub hole)



Tire Wheel Hub Caps for Polaris

ZP-YJ-030503-098



4. Installation completed.

