


- 1** Remove the screws and buckles pointed by the arrow.
(For the screws to be removed, see the positions pointed by red and yellow arrows in the following pictures, and the position of the red circle in the picture of the fastener to be removed).




- 2** Remove parts selected by yellow lines in the following picture.




- 4** Unplug the harness of the headlights and position lights.

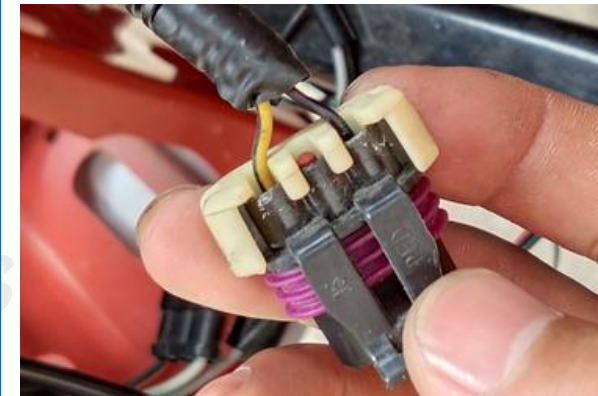


- 3** Remove the screw and buckle by the arrow.
Note: The third picture shows the tightening screws for adjusting the head of the left and right headlights.

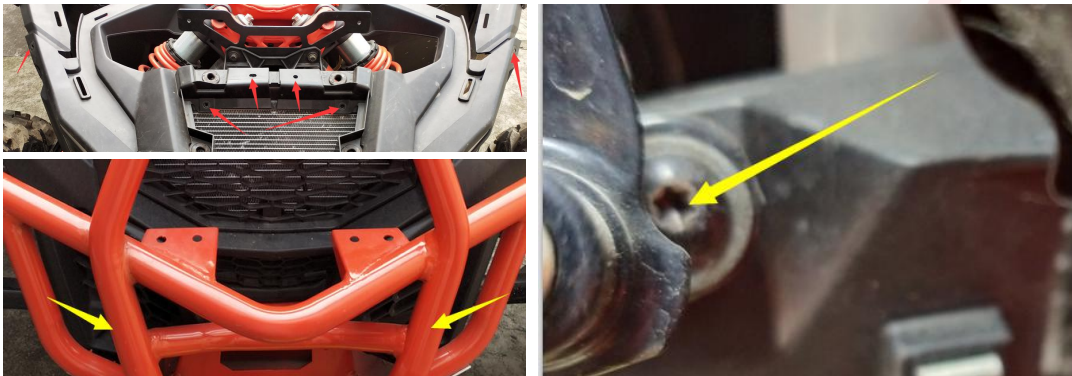

5 Remove the plastic front bumper.

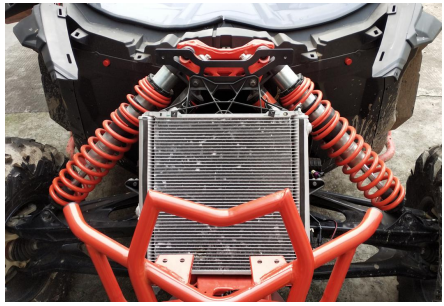


6 Remove the screws pointed by the red arrow and the buckle at the position of the red circle.

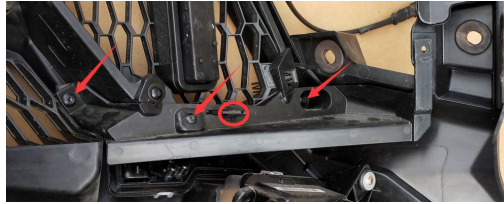

11 Reverse STEPS 5 to 1 and install the plastic front bumper.




7 Remove the two screws from the headlight.

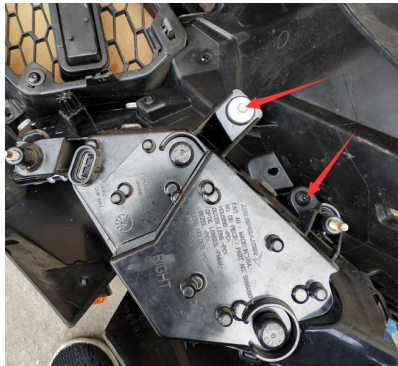

10 Reverse STEPS 9 to 6 and install the front signature lights with turn signals back.



12 This product comes with an adapter line, one end of the line (the end pointed by the arrow) is connected to this light. For the other end of line which pin is not plugged in, you need to find the positive and negative jacks according to the original car harness, and insert the pin into the jack of the connector. Connect the white line to positive, and the black line to negative. The yellow line needs to be connected to the steering control line separately.

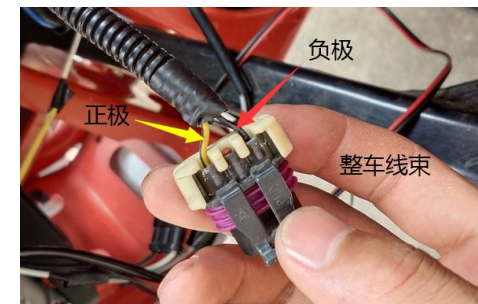

8 Remove the two connecting screws on the position light and the plastic front bumper.



9 The position light is also connected to the plastic front bumper with 3 buckle. Be carefully, and remove the original lamp.

