

Rear Accent Light For Can-Am Maverick X3

ZP-YJ-030602-036

SAUTVS®

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This REAR ACCENT LIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories.



3. Pry off the original keyhole above the switch cover, you can try to install the product supporting the switch, after taking down. (NOTE: If you find that the switch hole is small, you can use a hobby knife to trim the edge of the switch hole)





Rear Accent Light For Can-Am Maverick X3

ZP-YJ-030602-036

4. Prepare the product supporting the # 1 adapter cable, with a transparent sheath end inserted in the switch lug (note the wiring position), wiring is completed and placed aside for backup.

5. Extend the 4.6M extension cable in the kit from the rear wheel to the driver's side through the vehicle frame gap, then through the steering wheel control lever to the switch panel.

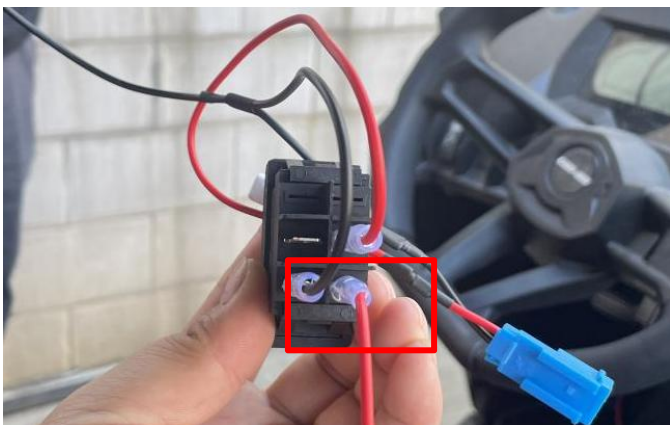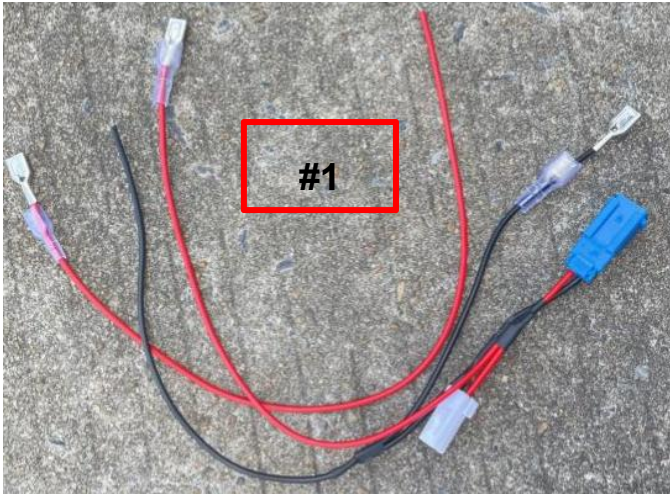


Rear Accent Light For Can-Am Maverick X3

ZP-YJ-030602-036

6. Through the switch hole extension cable and # 1 adapter wire connected (black wire connected to black, red wire connected to red, the place where the harness connector needs to peel off the outer skin to reveal the copper wire inside, the two lines of copper wire around together, and then do a good job of insulation protection), and finally the excess harness plug back into the switch hole, and then install the switch.

(The middle of the loose extension cord can be fixed with a cable tie)

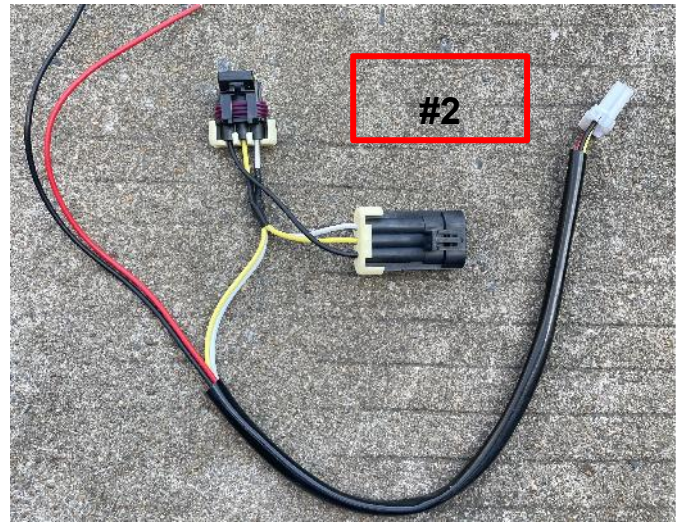



7. Prepare the #2 adapter cable, connect the extension cable to the #2 adapter cable (use the connection method in step 6. (Black wire connected to black, red wire connected to red), the vehicle rear tail light harness plug-in disconnected, with # 2 adapter wire corresponding to the harness plug-in and tail lights and the entire vehicle harness reconnected.

8. Connect the remaining harness of the #2 adapter wire to the rear bar light harness, and then secure the rear accent light to the vehicle with screws.

Rear Accent Light For Can-Am Maverick X3

ZP-YJ-030602-036

SAUTV5

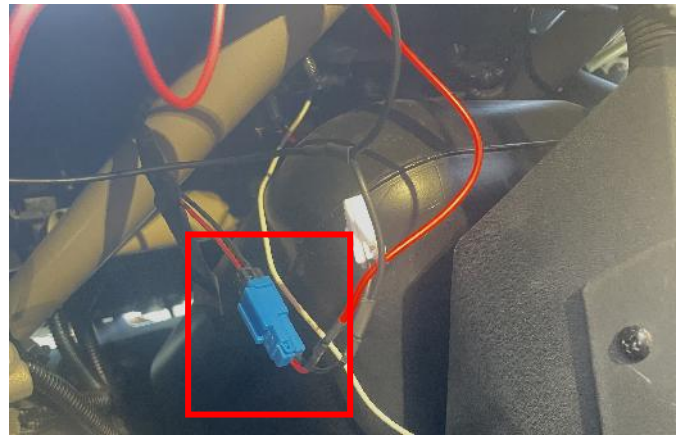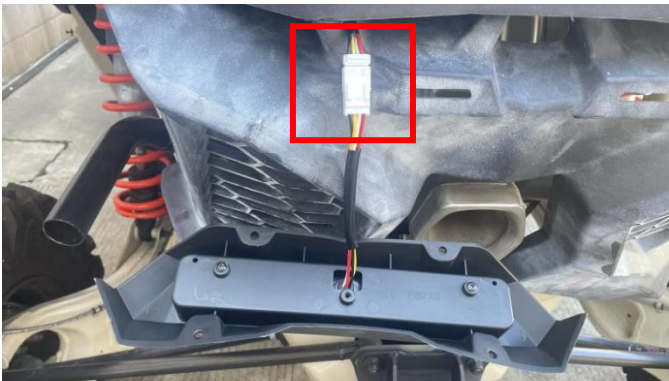

10. Installation completed.



9. Back in the cockpit, disconnect the harness plug under the dash (next to the steering wheel lever) and connect it to the harness with the #1 adapter wire blue plug.

