


BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.


IMPORTANT

This FRONT FLOOR MATS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

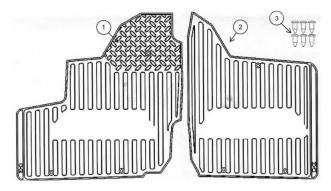

INSTALLATION INSTRUCTIONS


- 1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
- 2. Park the vehicle on level ground, set the parking brake, and turn off the ignition switch.
- 3. Lay the driver floor mat (1) & passenger floor mat (2) on the floor board with the logo facing up.

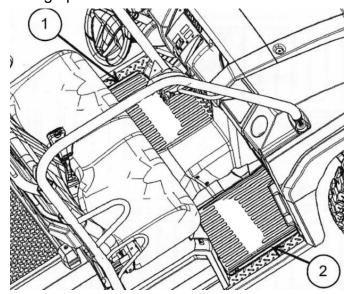

4. Mark the center of the three holes. Remove floor mat (1) and drill an 8mm hole at each mark. Repeat for passenger side floor mat (2).

Deburr holes as needed and clear floorboard of any debris.

5. Place floor mat (1) and (2) back in place and install plastic rivets (3) to secure floor mats.

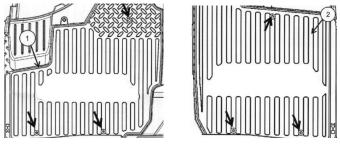

6. If vehicle has accessory hard cab installed, trim the floor mats (1) & (2) to prevent interference with the door threshold. Trim along lines shown with appropriate tool, staying on the outer edge of rib.

