

LED Headlight for Polaris Ranger 570 Mid-Size

ZP-YJ-030501-001



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The LED Headlight Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTRUCTIONS

Installation

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Pull the handle beside the cover and open the machine cover, as shown in the picture:



2. Firstly, remove the wiring harness plug-ins of the original headlight and remove the headlight (there is a steel clip and two O shaped rings on the headlight, remove them for later use) as shown in the figure:




3. Place the removed steel clip to the new headlight following the position of the original headlight, and then install the light to the vehicle, and fix the screws, and the O-rings are also installed back to the original position, as shown in the picture:




LED Headlight for Polaris Ranger 570 Mid-Size

ZP-YJ-030501-001

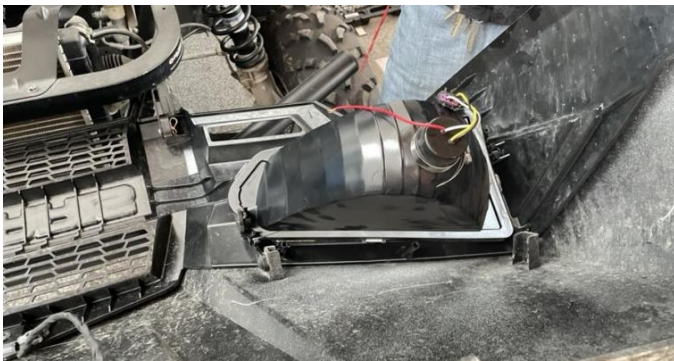


4. After installing the headlight, take out the transfer wiring in the accessories package, and connect one end with the headlight wiring harness. The other end is connected with the original wiring harness on the vehicle, as shown in the figure;

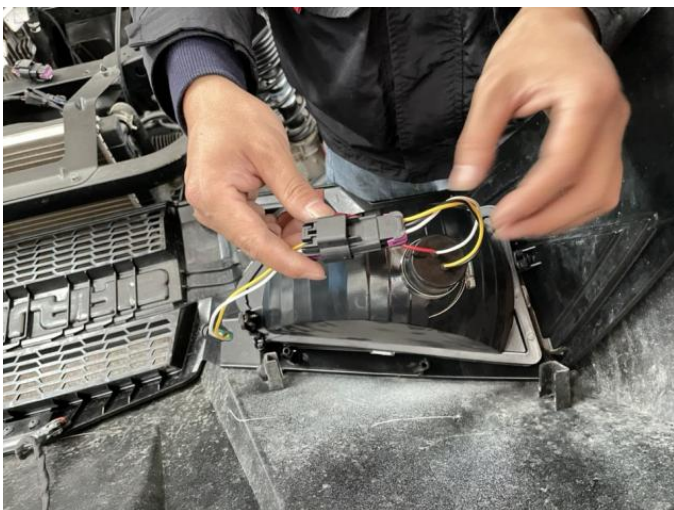

5. After connecting the headlight wiring harness, take out the white wiring harness in the accessories package, peel off the outer skin of one end, expose the copper wire, and connect it to the

ACC terminal. As shown in figure:

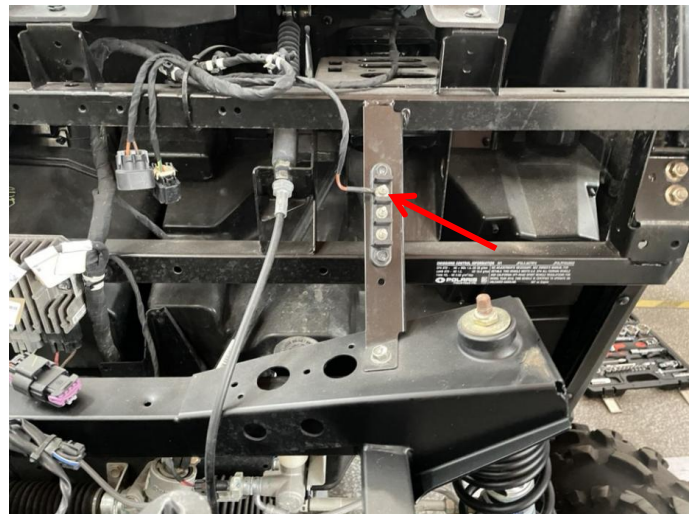

6. Pull the white wire to the position of the headlight, peel off the middle of the wiring harness (don't cut the copper wire inside), connect it with the red wire on the headlight, and complete the insulation measures, then connect the extra white wire to the red wire of the other headlight, (replace the other side headlight as above steps 2-4, as shown in figure)



7. Finish the installation.

