

EXTENDED FENDER FLARES KIT for POLARIS RZR XP 1000

ZP-YJ-030510-014



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


IMPORTANT

Your FENDER FLARE KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS


Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

PART A (for Front):

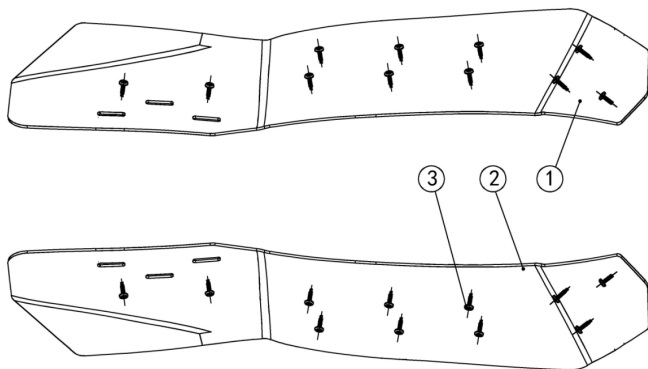

No.	Name	Quantity
1	Front Mud Flap-L	1
2	Front Mud Flap-R	1
3	Phillips Self-drilling Tapping Screws(Black Coating)ST4.2 x19	22

1. Map the holes of mud flap onto the jaw of the vehicle(see the red box on the right diagram), then twist the tapping screws to the corresponding position(see the red circle on the right diagram).

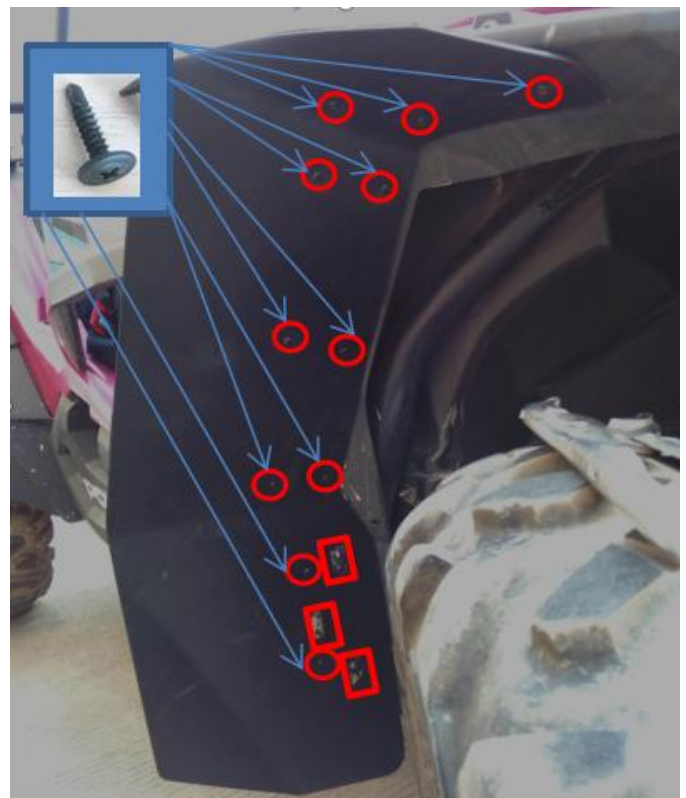

PART B (for Rear):

REMOVAL OF STOCK REAR FENDER FLARES:

1. Remove original rear left fender flare from body panel by removing four screws and U-clip nuts as spare parts.

EXTENDED FENDER FLARES KIT for POLARIS RZR XP 1000

ZP-YJ-030510-014



2. Repeat the Step 1 for removal of rear right fender flare on the opposite side of the vehicle.

3. Align the screw holes and fix them together with screw or plastic buckles.

INSTALL EXTENDED WIDE REAR FENDER FLARES:

1. Assemble two parts below of left fender flares by self-tapping screws and flat washers.



2. Attach the original U-clip nuts to the left extended rear fender flare.




EXTENDED FENDER FLARES KIT for POLARIS RZR XP 1000

ZP-YJ-030510-014

SAUTV5[®]

Fix with a plastic buckle at the red arrow positions, fix with screws at the yellow arrow positions.

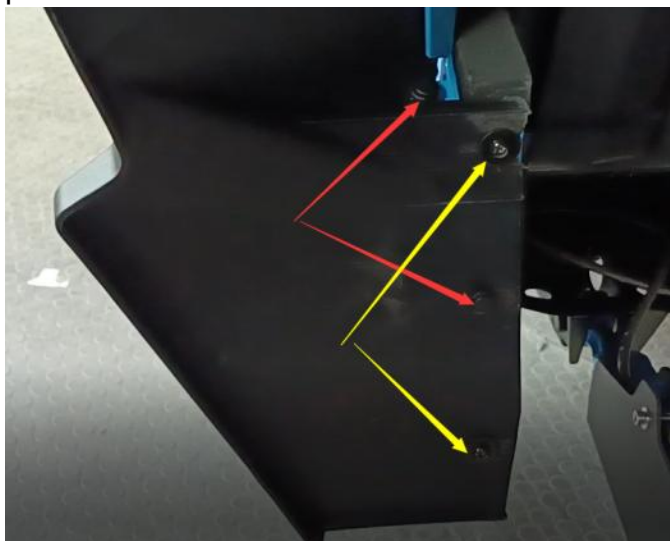

4. Repeat Step 1-3 to install the rear right fender flare on the opposite side of the vehicle.

5. Installation finished.

