

Battery Cover Kit For Can-Am Maverick X3

ZP-YJ-030603-151

SAUTV5

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT



This BATTERY COVER KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories.



3. Adjust the front passenger seat of the vehicle to the front to facilitate the installation of the cover. Insert the two limit cards on the cover into the slot of the battery box, and then use the nylon expansion screws in the product accessories package to fix it.

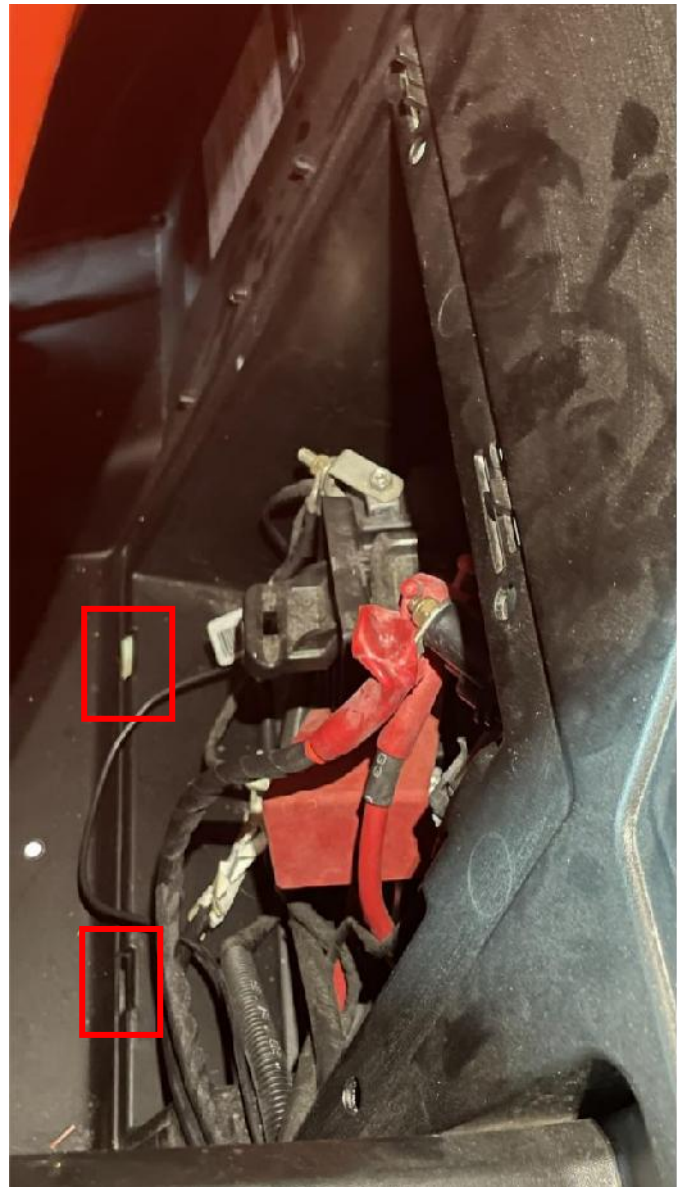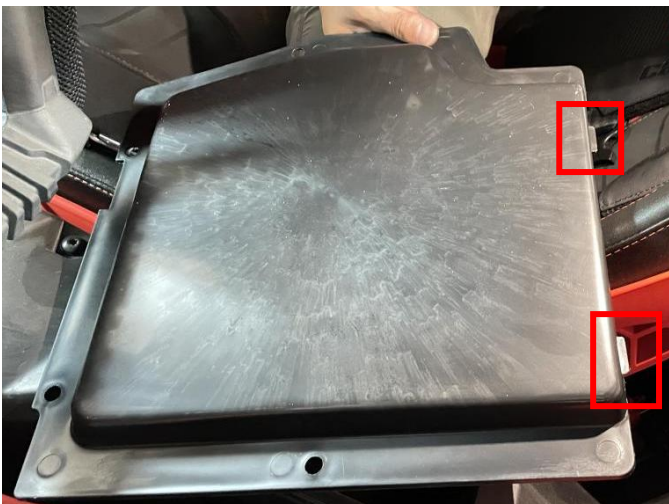

Battery Cover Kit For Can-Am Maverick X3

ZP-YJ-030603-151

SAUTV5



4. Installation completed.

