

# Lower Panels Fairing For Can-Am Ryker

ZP-YJ-030603-131

SAUTV5

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

## IMPORTANT


This LOWER PANELS FAIRING KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories.



3. First remove the original vehicle cover, loosen the screws on both sides of the front bumper (without taking off the front bumper), remove the nylon snap fasteners that hold the side guards, and take off the side guards.

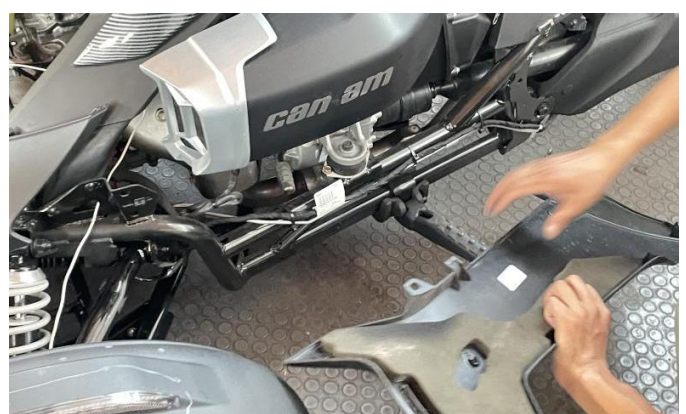

# Lower Panels Fairing For Can-Am Ryker

## ZP-YJ-030603-131

4. There are 3 positioning points on the removed side guards. Use a 5.5mm drill to drill out screw holes, then install the foot side guard and fix it with the screws in the accessories package (The other side can be installed in the same way) . After the installation is complete, put the side guards and the hood back on the original vehicle.



5. Installation completed.

