

Transparent Handguards For Can-Am Ski-Doo

SAUTV5®

ZP-YJ-030603-136

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT


This TRANSPARENT HANDGUARDS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories.



3. First install the handguard on the handlebar of the original vehicle, adjust the angle and then fix it with screws.

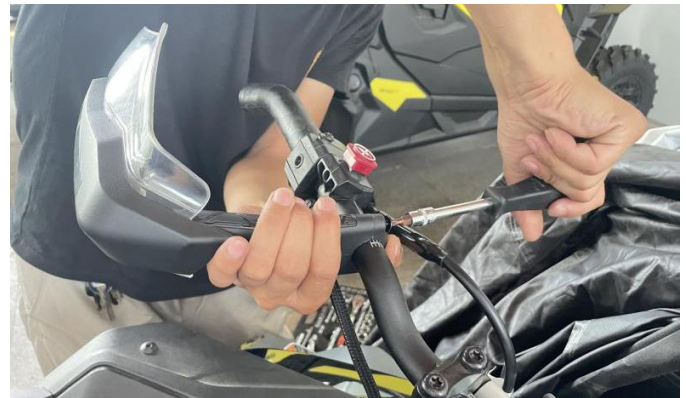

4. Installation completed.

