

Center Cage Trim For Can-Am Maverick X3 MAX

ZP-YJ-030603-123

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT


This CENTER CAGE TRIM KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories.

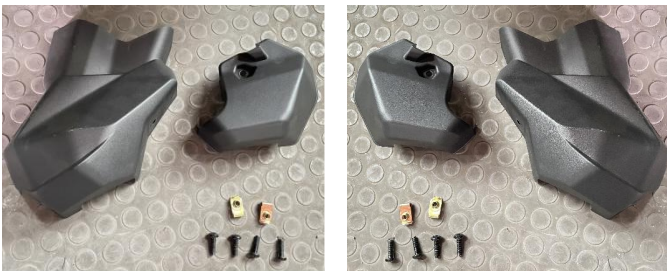

3. Install the steel clip in the accessories on the small guard plate, spare.

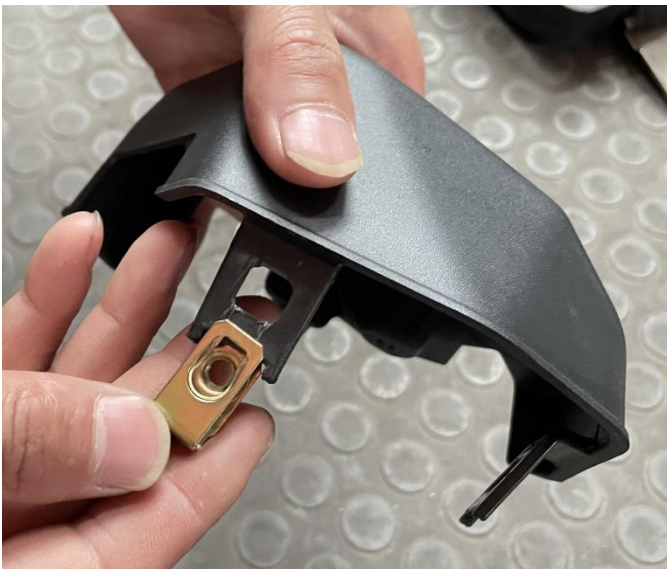

4. First, fix the large guard plate to the center pillar of the original vehicle with screws.




Center Cage Trim For Can-Am Maverick X3 MAX

ZP-YJ-030603-123

SAUTV5



6. The installation is complete.

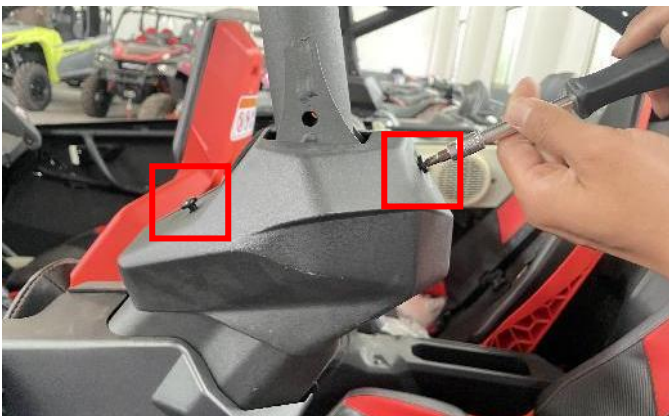

5. Snap the small guard plate on the large guard plate and fix it with screws.
(Note: the other side of the guard plate is also completed in the same steps)

