

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This FRONT SIGNATURE LIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories.





3. First open the original front storage box as well as the cushion, and then remove the decorative panels on both sides of the vehicle head.



4. Remove the original front storage box and front bumper, disconnect the connecting harness plug.
(Note: The bottom of the storage box and the frame have two screws fastened, both need to be removed)

Front Signature Light For Can-Am Spyder

5. Remove the filter and air intake trim on the front bumper from the storage compartment. Remove the storage box and disconnect all wiring harness inserts inside.

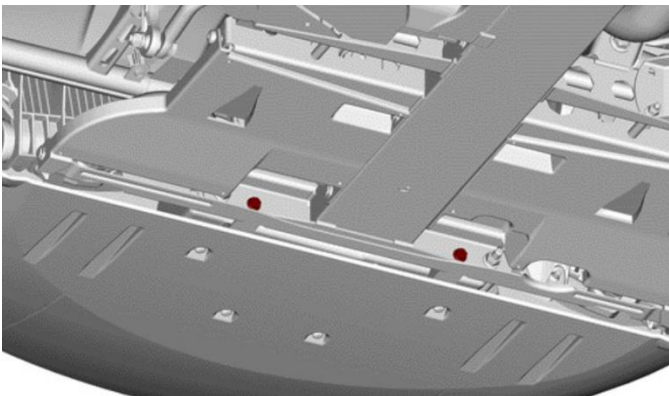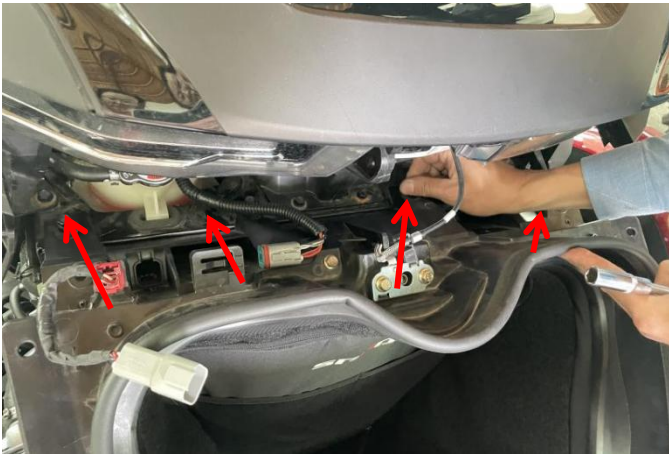

Front Signature Light For Can-Am Spyder



6. Remove the baffle of the original vehicle's daytime running lights on the front bumper, and then install the daytime running lights. Carry out the wiring work of the transfer line in the order shown in the figure, and connect the daytime running lights in sequence.



7. After the daytime running lights are installed, reassemble the previously removed filters, air inlet trims and storage boxes back to their original positions.



Front Signature Light For Can-Am Spyder



8. Remove the front wheel fender, unscrew the guard plate screw of the original vehicle turn signal from the back of the fender, remove the guard plate to find the original vehicle turn signal wiring harness, disconnect the plug-in, and use one end of the extension cable in the accessories package to connect with it. The turn signal wiring harness of the original vehicle is butted, and the other end is connected to the wiring harness of the whole vehicle. After finishing the wiring harness, install the turn signal guard plate and fender back. Then pull the excess brown extension cable along the overall wiring harness of the original vehicle to the headlight position.



Front Signature Light For Can-Am Spyder

9. After completing all the above steps, put the front storage box back on the original car, connect the headlight wiring harness connector that was disconnected before, and connect the daytime running light wiring harness. Finally, reassemble all the decorations and accessories that were removed before.



10. The installation is complete.

