ZP-YJ-030603-129


SAUTVS

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This REBOARDING LADDER KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

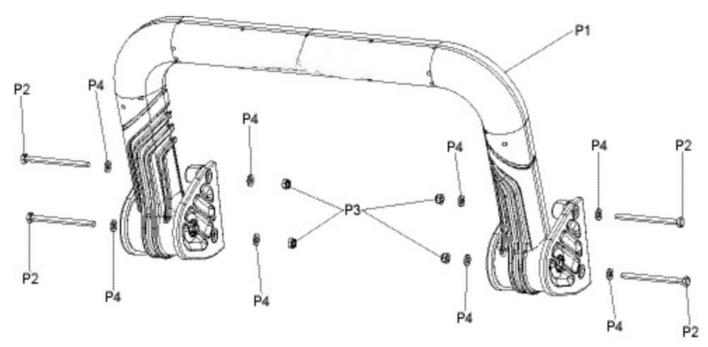

INSTALLATION INSTRUCTIONS


 Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
Position the assembled ladder [P1] on the vehicle as shown below.



1. Ladder Assembly [P1]

(NOTE: Only RH side shown, apply the following steps to the LH side too.)

3. Install the assembled ladder [P1] using two M6 x 80 hexagonal screws [P2], four flat washers [P4] and two M6 elastic stop nuts [P3].

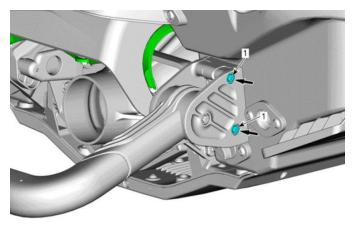


1. M6 x 80 Hexagonal Screws [P2]

Reboarding Ladder For Can-Am Sea-Doo


ZP-YJ-030603-129



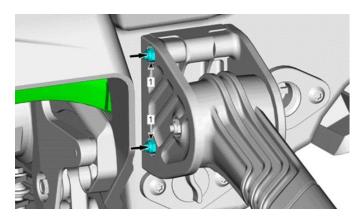

1. M6 Elastic Stop Nuts [P3]

(NOTE: Refer to the cross section below for proper washer positioning.)

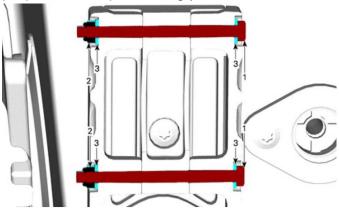

4. INSTALLATION COMPLETE.



1. M6 x 80 Hexagonal Screws [P2]

2. M6 Elastic Stop Nuts [P3]

3. Flat Washers [P4]