

Front Bumper LED DRL for Can-Am Ryker

ZP-YJ-030602-022



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT



This FRONT BUMPER LED DRL KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories, shown in the picture.



3. First install the accessory bracket on the fixture and install the spare.

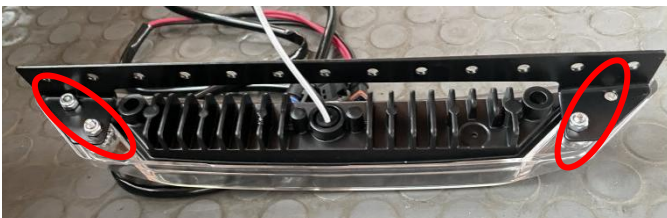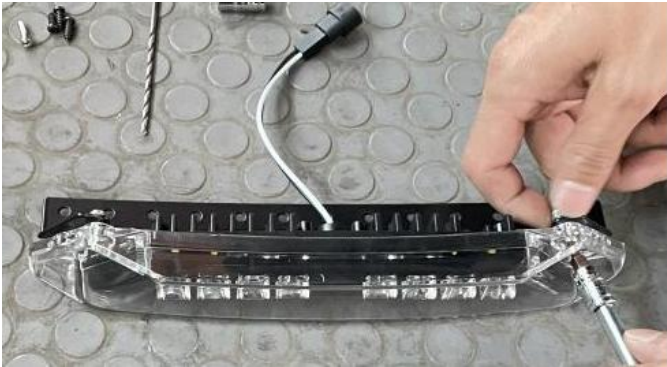

4. Open the hood of the vehicle and find the place where the lamps are installed.





5. Before installing the lamp, you need to drill the screw holes in the vehicle with a pistol to facilitate the fixing of the lamp.

(The position of the screw hole needs to be drilled according to the screw hole position of the mounting bracket on the lamp. Normally drill 3 screw holes.)

Front Bumper LED DRL for Can-Am Ryker

ZP-YJ-030602-022

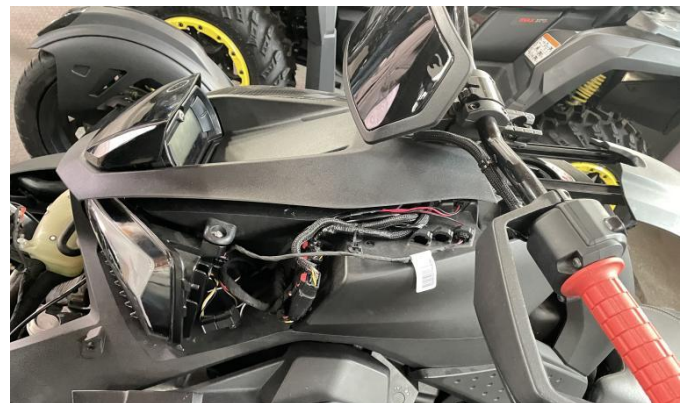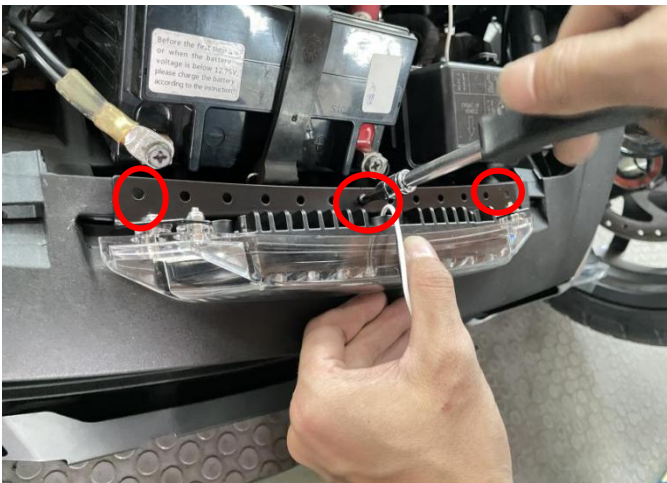


6. After the installation of the lamps is complete, you need to remove the decorative plate next to the front of the car, and then remove the logo in the picture 4 sub button.

8. Find the location of the headers shown in the diagram, unplug the original wiring harness plug, and use the provided adapter cable to connect to the corresponding jack.



7. As shown in the diagram, remove the sub button on the side of the cover trim panel.

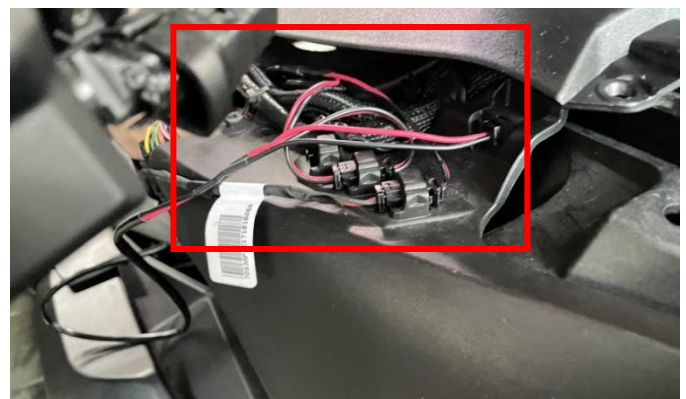

Front Bumper LED DRL for Can-Am Ryker

ZP-YJ-030602-022



9. Connect the adapter wire along the frame slit to the position of the front daytime running lights, and lamps on the harness docking well. (after connecting the harness first start the vehicle, check whether the lamps are powered and work)

10. After the normal use of lamps and lanterns, put back the previously disassembled accessories and decorative panels to complete the installation.

