

LED Tail Light Assembly for Can-Am Spyder

ZP-YJ-030602-024

SAUTV5

BEFORE YOU BEGIN



Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT


This LED TAIL LIGHTS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories.

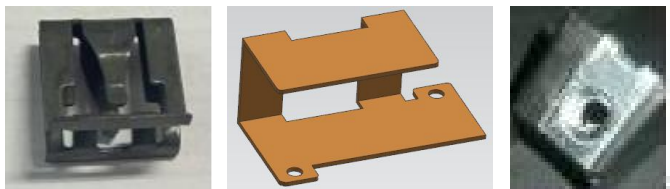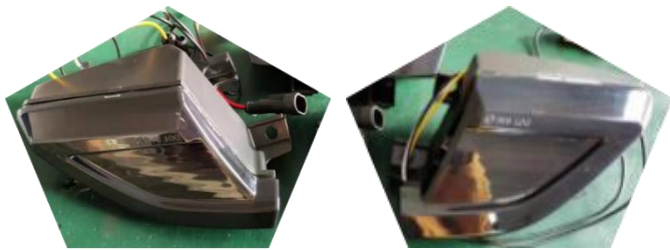

3. First clip the steel card to the rear shell of the taillight (6 steel cards), save it for spare.

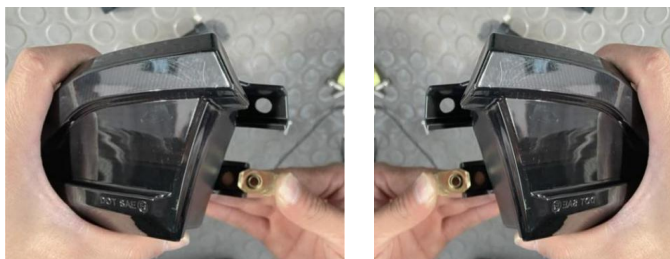

4. First remove the seat cushion of the vehicle, find the wiring harness of the original taillight, disconnect the plug-in unit, and remove the original taillight.


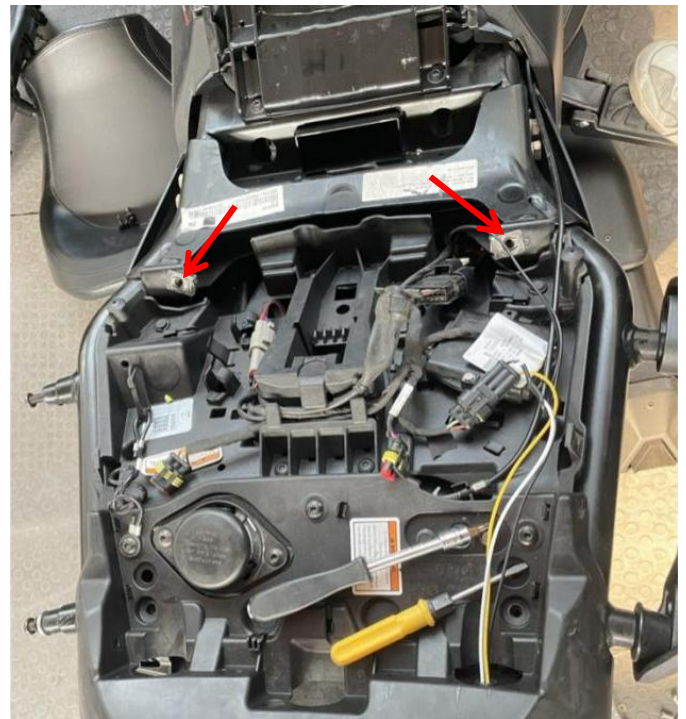


LED Tail Light Assembly for Can-Am Spyder


ZP-YJ-030602-024

SAUTV5

5. Install the new taillights back to their original positions in turn according to the directions, then fix them with screws, and connect the wiring harness plug-in (you can first start the car to check whether the taillights can be energized and work normally).

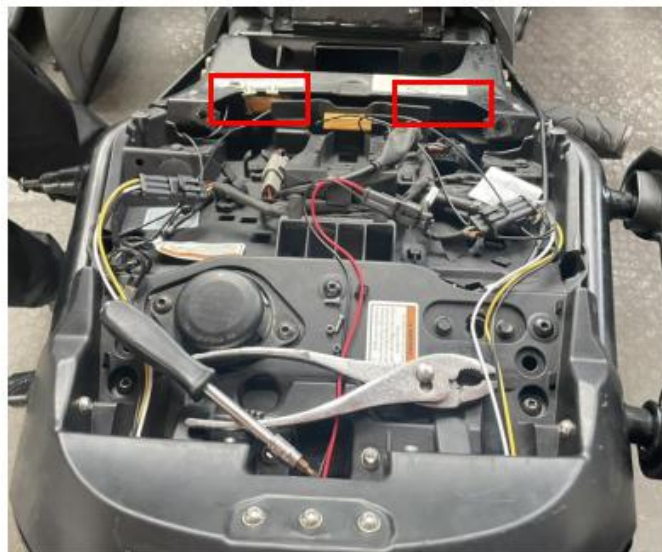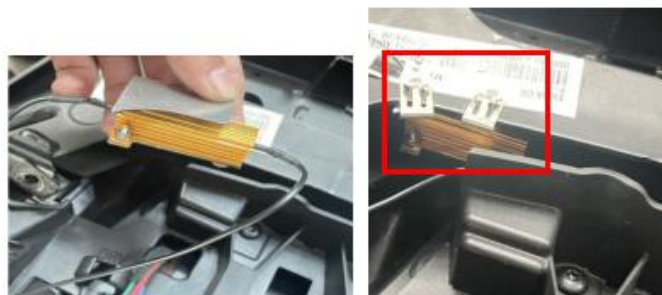

7. The installation is complete.

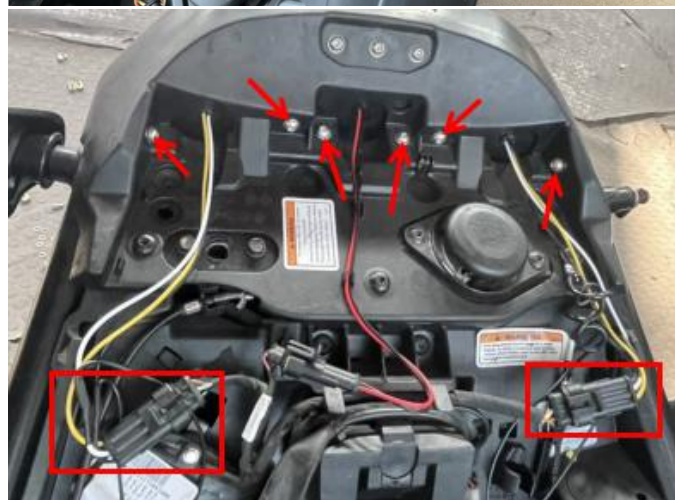

6. There is a gold resistor on the tail light wiring harness. The resistor needs to be installed on the bracket (the bracket is not divided into left and right), and then fixed with steel clips beside the screws on both sides of the car seat cushion. After completion, the seat cushion can be installed.