

# Folding Side Mirrors For Can-Am Maverick X3

ZP-YJ-030605-008

SAUTV5

## BEFORE YOU BEGIN



Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT

This FOLDING SIDE MIRRORS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories.

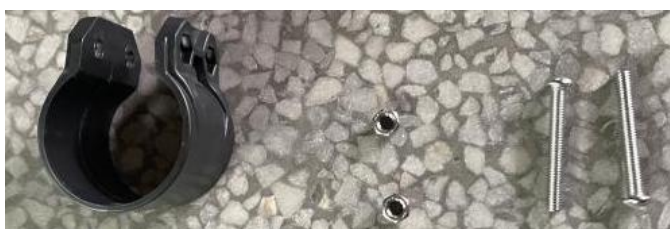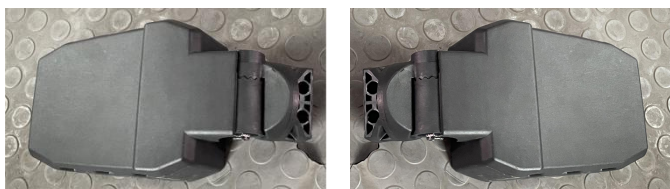

3. Before installing the reversing mirror need to adjust the installation angle of the reversing mirror, first determine a good reversing mirror bracket and the body of the contact surface curvature consistent, tighten the rear of the reversing mirror screws.



# Folding Side Mirrors For Can-Am Maverick X3

ZP-YJ-030605-008

SAUTVS®



4. First clip the nut in the accessory bag into the nut slot of the ferrule, then clip the ferrule to the A-pillar of the Vehicle.



5. Install the reversing mirror, and then fixed with screws.



6. Installation completed!

