

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


IMPORTANT

This LED TAIL LIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product and accessories.


3. Fix the steel card on the rear housing of the taillight (3 steel cards) as indicated in the diagram, spare.

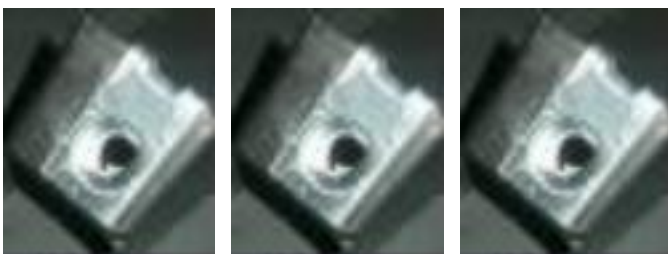

4. First remove the rear cushion, find the original tail light harness, disconnect the plug-in, remove the original tail light, install the new tail light, fix it with screws, and then connect the harness plug-in (you can start the car first to see if the tail light can be powered on properly and work)

LED Tail Light For Can-Am Spyder ZP-YJ-030602-025

SAUTVS®

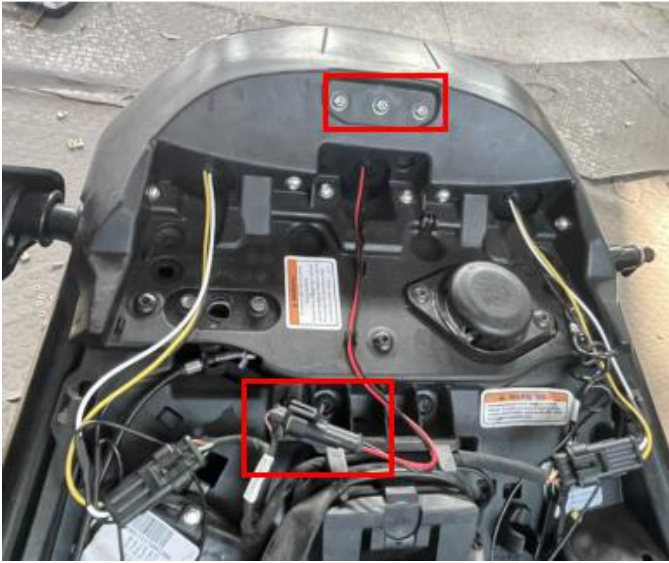

5. Install the rear cushion, the installation is complete!

