

LED Headlights For Can-Am Ryker

ZP-YJ-030601-002

SAUTVS®

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT



This LED HEADLIGHTS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove the original headlights.



3. Disconnect the wire harness on the original wheel eyebrow light and connect the white extension wire harness to the turn signal wire (yellow-gray).
(This step corresponds to the turn signal)

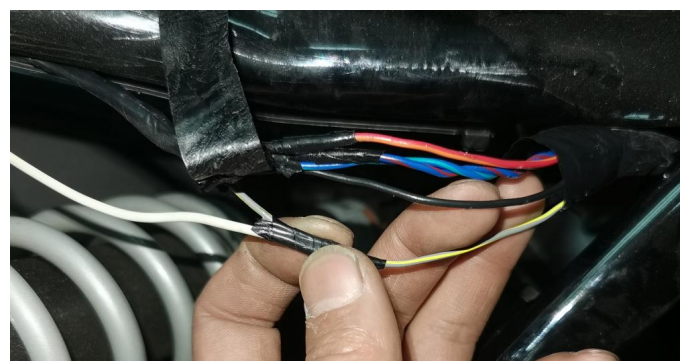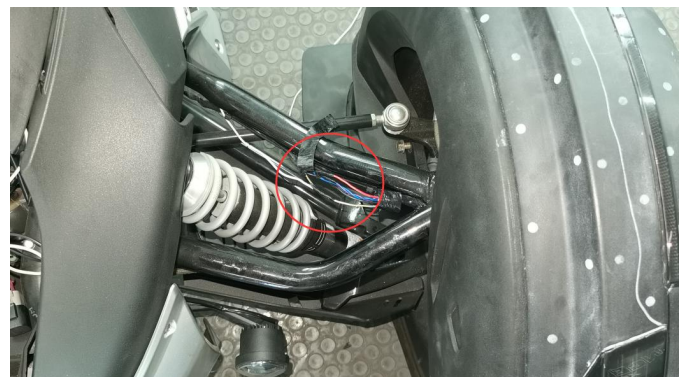


LED Headlights For Can-Am Ryker

ZP-YJ-030601-002

4. Open the cover of the ACC control box and connect the white extension cable to the ACC controller.

(This step corresponds to the daytime running lights).

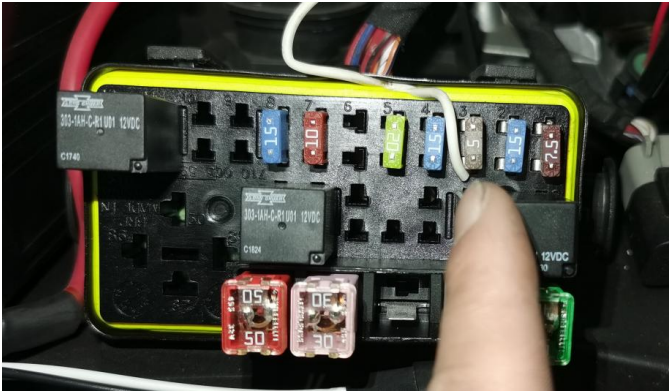

5. Connect the plug of the new headlight to the headlight plug of the vehicle.



6. Connect the red wire on the headlight to the white extension wire in step 4 and insulate it well.



7. Connect the brown wire on the headlight to the white extension wire in step 3 and insulate it well to protect it.



8. The other side of the headlight also refer to this method.

9. Test the function under power-on test. (Note: If you use the steering function, must connect the meter removed in step 1 to the entire vehicle)



LED Headlights For Can-Am Ryker

ZP-YJ-030601-002

SAUTVS®

10. Secure the headlight to the frame with screws. See the red arrow for the installation location.



11. Restore the parts removed in step 1. The installation is complete.



Low Beam



High Beam



Turn Signal