

Fender Flares FOR CAN-AM MAVERICK X3

ZP-YJ-030610-001



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This FOLDING SIDE MIRRORS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

Parts List (parts available with kit only and not available separately)


ITEM	PART NAME	DESCRIPTION	QTY
A	Front left fender flare	CNC cut-out made of 1/8" thick high density polyethylene	1
B	Front right fender flare	CNC cut-out made of 1/8" thick high density polyethylene	1
C	Rear left fender flare	CNC cut-out made of 1/8" thick high density polyethylene	1
D	Rear right fender flare	CNC cut-out made of 1/8" thick high density polyethylene	1
E (INSTRUCTION BAG)	Mounting hardware	Includes: 42 philips truss head screws SS M6 x 24, 42 washers SS M6 x 25 and 32 flanged locknuts M6	1

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

2. Front left fender flare installation


A). Remove the OEM screws and nuts from the front lateral panel as shown below by the arrow. (6 screws and 1 nuts)

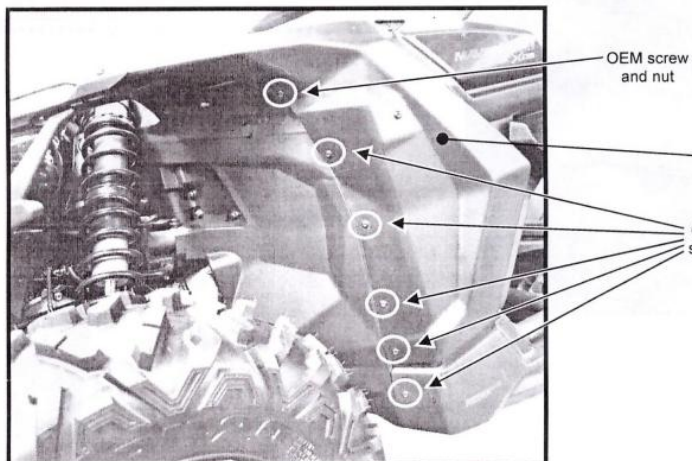

IMPORTANT NOTICES

Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.

B) .Install the front left fender flare (Item A) to the vehicle front left lateral panel using supplied hardware as shown below.

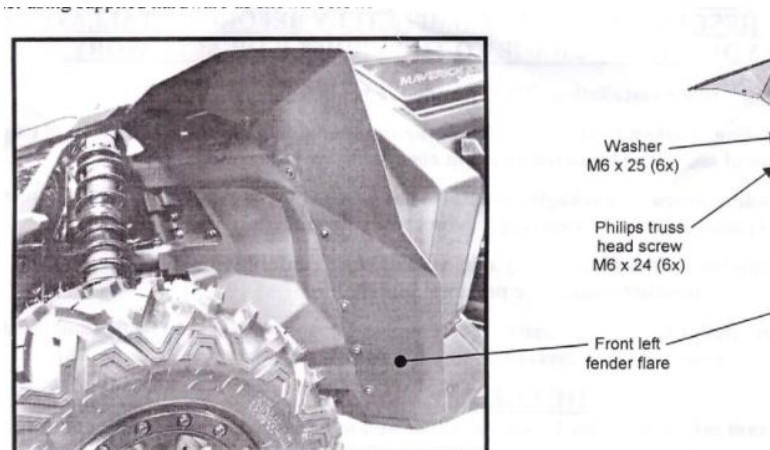

Fender Flares FOR CAN-AM MAVERICK X3




ZP-YJ-030610-001

C).Ensure that the front left fender flare is in proper position.


As reference, the fender flare edge should be aligned perfectly with the lateral panel edge.

Use the fender flare mounting holes as guide and drill two 1/4 inch diameter holes through the front left lateral panel and attach with supplied hardware as shown below.

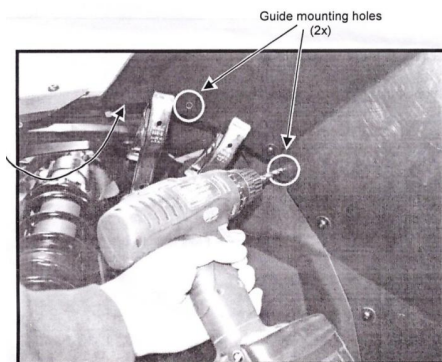


D).Repeat steps A) to C) for the front right fender flare (Item B).

WARNING: For each guide mounting hole, a single (1) layer of OEM front left lateral panel should be drilled / pierced.

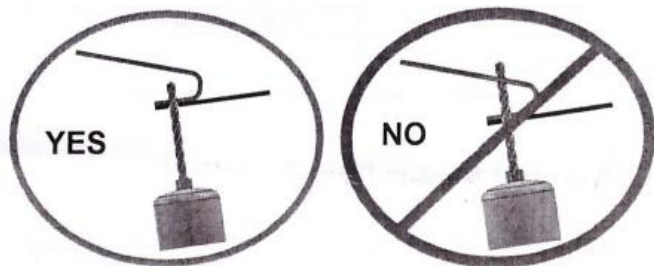


Maximum drilling depth of 1/62"

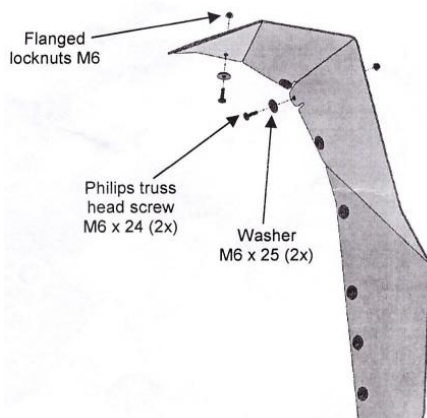


3. Rear left fender flare installation

E).Temporarily remove the OEM screw that secure the rear fender deflector to the tail light housing as shown below by the arrow.

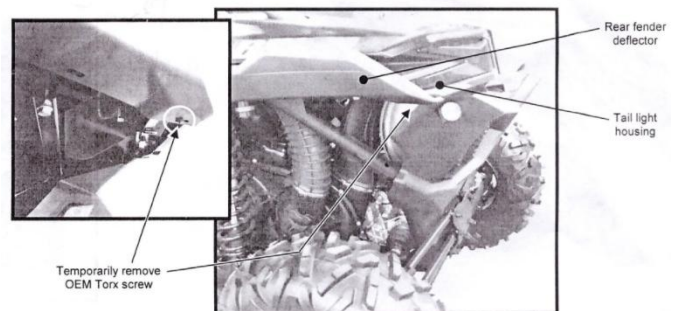

F).Install the rear left fender flare (Item C) to the rear fender deflector using the OEM torx screw removed in previous step.

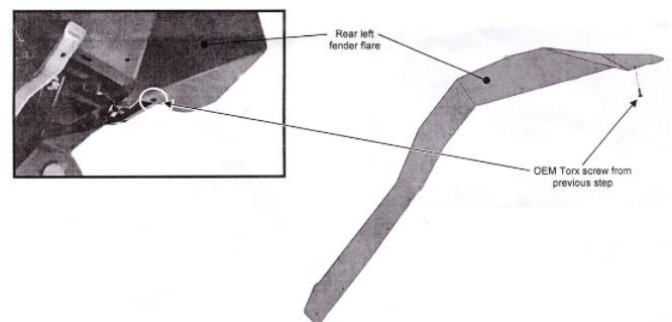

IMPORTANT NOTICES


Over-tightening any and/or all screws will cause cracks around mounting holes which is not covered by any warranty.

G).Temporarily secure the remaining section of the fender flare to the vehicle using spring clamps or any other clamping tools as shown below.

As reference, the edge of the fender flare lower section should be aligned perfectly with the OEM fender deflector edge.

Fender Flares FOR CAN-AM MAVERICK X3


ZP-YJ-030610-001

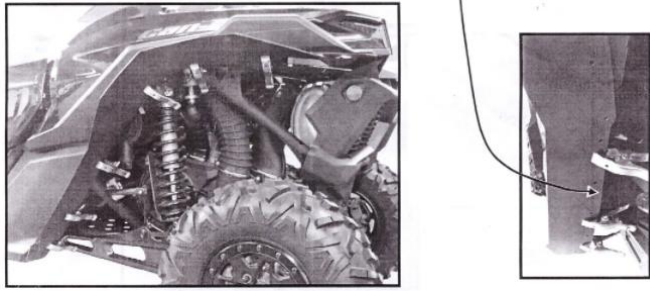

H).Ensure that the rear left fender flare is in proper position and use the fender flare mounting holes as guide to drill 1/4 inch diameter holes through the rear fender deflector.

WARNING:For each hole, a single (1) layer of OEM rear fender deflector should be drilled / pierced.

Attach with supplied hardware as shown below.

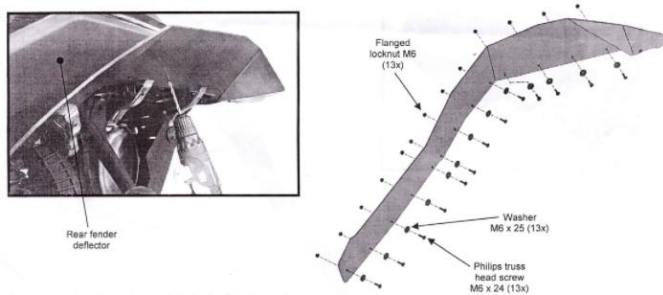

I) .Repeat steps E) to H) for the rear right fender flare (Item D).

4. Maintenance and Care

Tighten all hardware after first use and periodically thereafter.