

Rear LinQ Rack For Can-Am Spyder RT

ZP-YJ-030603-143

SAUTV5

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This REAR LINQ RACK KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove the cushion of the vehicle.



3. Open the rear cargo box, adjust the switch valve to the unlocked state, pull the trigger under the cargo box by hand, and finally remove the rear cargo box.


Rear LinQ Rack For Can-Am Spyder RT

ZP-YJ-030603-143

SAUTVS®



4. Keep the switch valve in the unlocked state, install the rear rack, lock the valve switch (the switch valve needs to be aligned with the valve port on the vehicle during installation), and finally hold the triggers at the bottom of both sides of the rack.

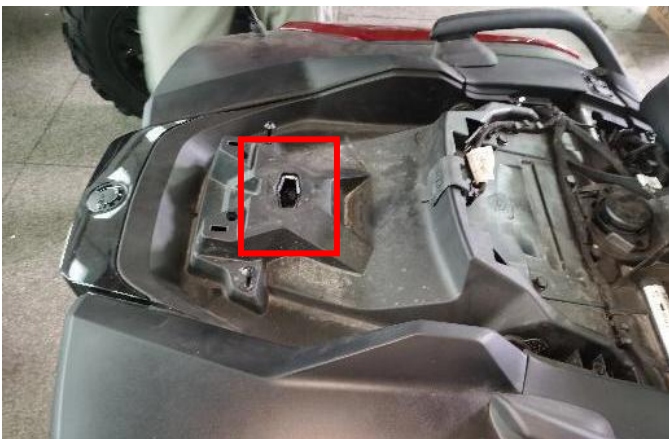

5. Installation completed.

