

# Front Mesh Grill with Light for Sportsman XP 1000

ZP-YJ-030502-022

SAUTV5

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


## IMPORTANT

This MESH GRILL WITH LIGHT KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.  
2. First open the buckle of the front guardrail cover, after opening the cover, unscrew the on-off valve of the storage box, and take out the storage box inside.

3. Unplug the wire harness plug-in of the central grid lamp, connect the wire harness to the headlight wire harness, connect the black wire to the black wire, and the gray wire to the green wire. After the wiring is completed, take insulation measures and spare.

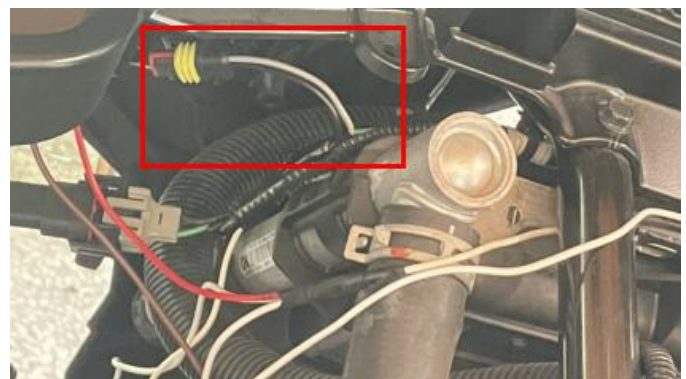

# Front Mesh Grill with Light for Sportsman XP 1000

ZP-YJ-030502-022

4. Remove the original mesh and replace it with a lighted version. There are three inverted buckles on the bottom edge of the mesh, and the slot of the car body is snapped, and then pressed in with a little force, it can be installed successfully.

5. After the central network lamp is installed, insert the wire harness plug-in on the central network lamp and the plug-in that has just been paralleled to the wiring harness of the whole car (you can start the car first to check whether the central network lamp is normally energized), and then put it back in the storage Box, buckle the cover of the front guardrail.



6. Installation completed.

