

LED Headlights for Polaris Sportsman XP 1000

ZP-YJ-030501-005



BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This LED HEADLIGHTS KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS



1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Products and accessories.

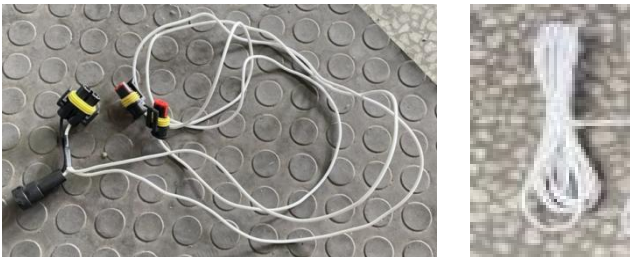

3. Remove the protective cover of the housing of the high beam headlight, first disconnect the headlight harness plug-in, then open the snap of the front cargo box and open the front cargo box.




4. Remove the back of the cargo box fixed screws and two pins, and then remove the cargo box, find the logo out of the two switch valve screwed in the opposite direction, remove the storage box.

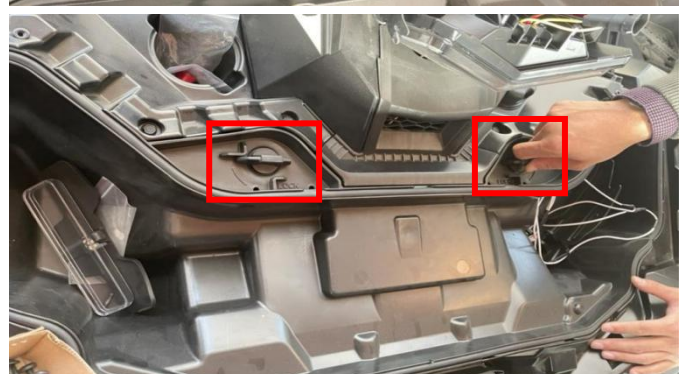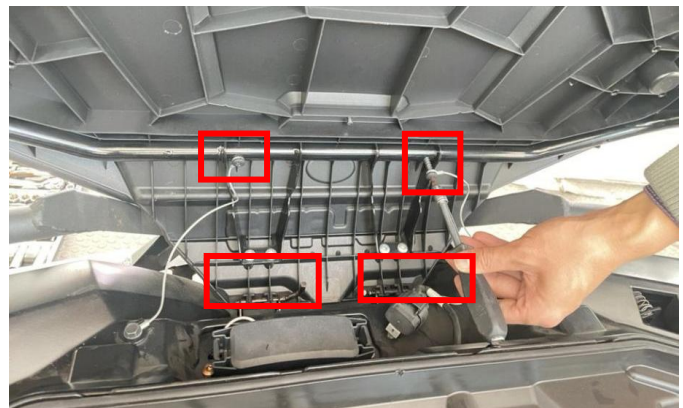


LED Headlights for Polaris Sportsman XP 1000

ZP-YJ-030501-005

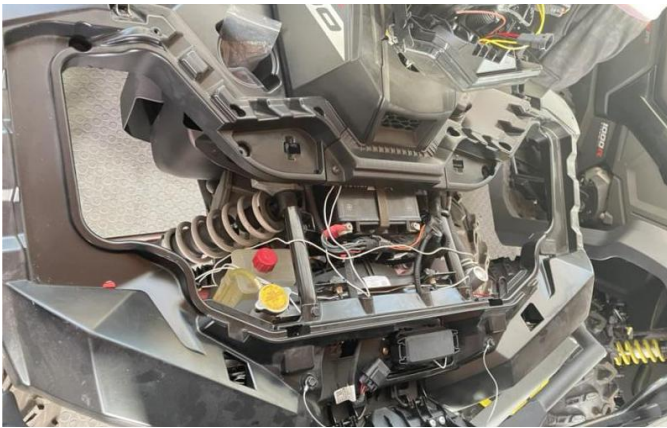


5. Take out the storage box, and then remove a crossbeam bracket in front of the vehicle to facilitate the removal of the original lights.

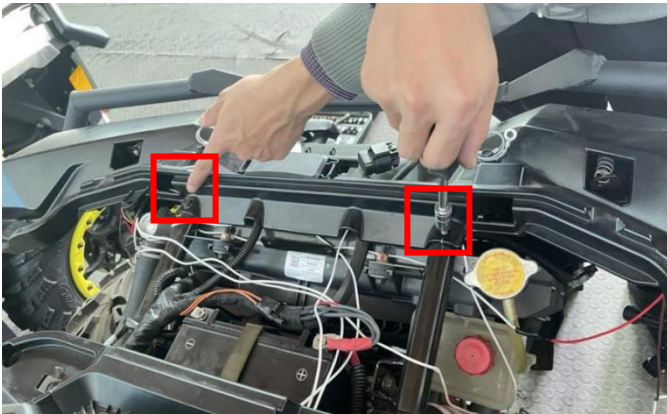

6. First remove the screws securing the original headlight, disconnect the headlight harness plug-in and take out the headlight (remove the spring and put it aside for backup).





7. Install the new headlights and fix them with the springs and screws that were removed before (the headlights on the other side can be installed in the same way).

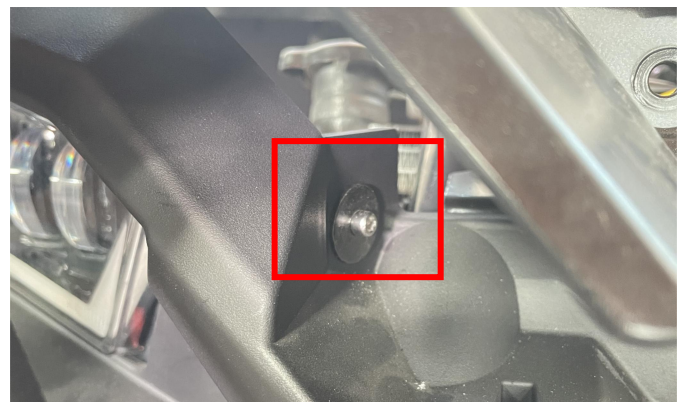

8. After the headlights are fixed, take out the adapter cable in the accessories, connect the plug-in at the A end with the plug-in at the high beam headlights, and then pull the plug-in at the B and C ends to the headlights (1 each on the left and right) to connect with the plug-in at the headlights.

LED Headlights for Polaris Sportsman XP 1000

ZP-YJ-030501-005

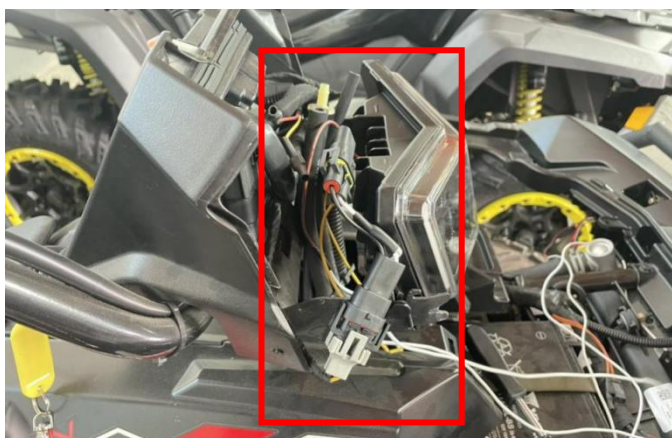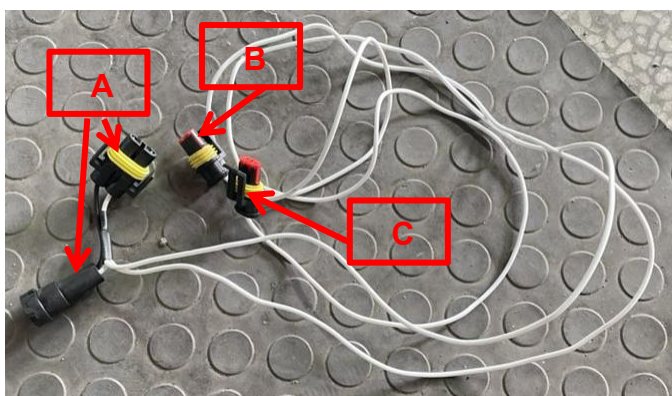

9. After the wiring harness is connected, start the vehicle first, check whether the headlights can work normally, no problem, you can put back the parts removed before, the installation is complete.

