

# LED High-Beam Headlight for Polaris Sportsman XP

ZP-YJ-030501-011

SAUTV5<sup>®</sup>

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT

This Headlight is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

Pictures of products and accessories:






1. Remove the decorative cover of the original high-beam headlight, unscrew the adjusting screw of the high-beam headlight and the rubber ring fixed on both sides of the headlight. As shown in picture:




# LED High-Beam Headlight for Polaris Sportsman XP

ZP-YJ-030501-011

SAUTV5®

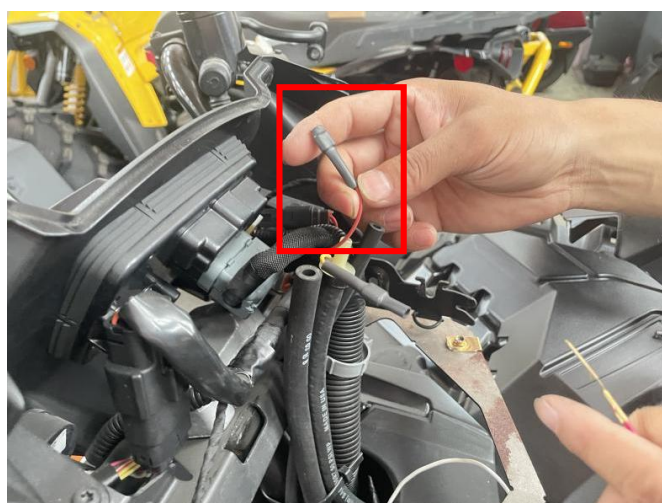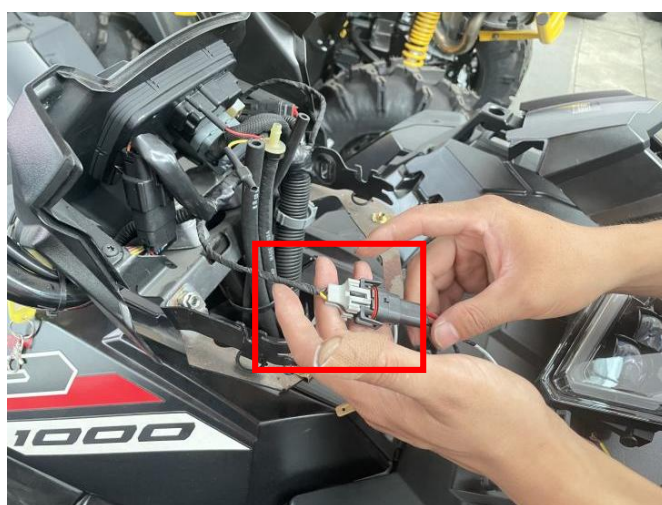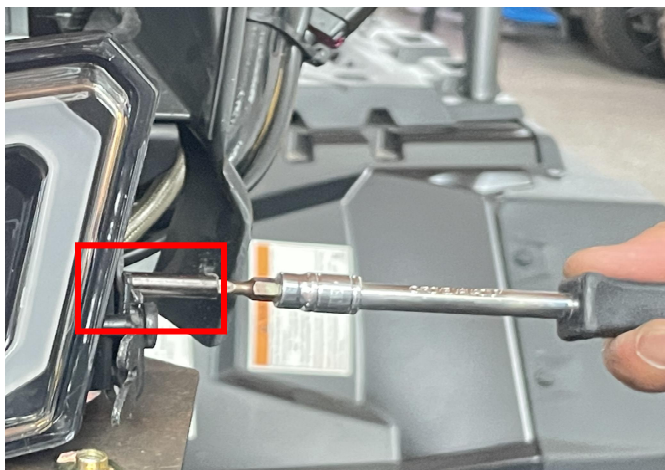



2. Disconnect the wiring harness plug-in, remove the original headlight, pry the steel clip on the original headlight with a tool, and clamp it on the new headlight according to the original position. Take out the patch cord of the product, connect one end with the original vehicle wiring harness, connect the other end with the new headlight, and connect the remaining red extension wire with the original vehicle reserved wiring harness (red). As shown in picture:

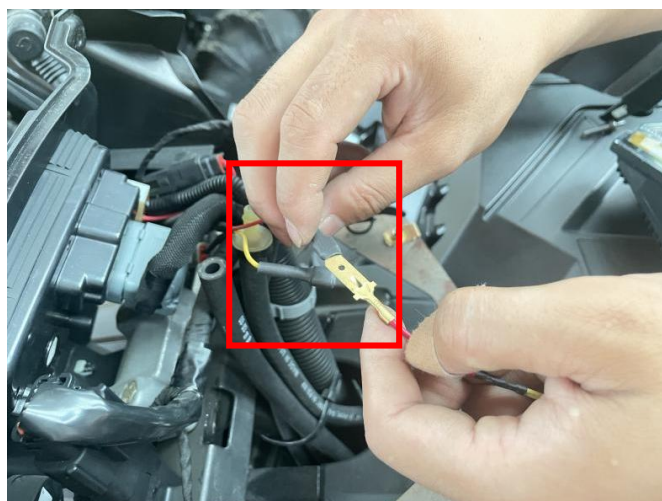

3. Start the vehicle and turn on the switch of high beam, to check whether the high beam can be turned on normally. When finished, you can fix the headlight and re-fasten the rubber rings and adjusting screws on both sides of the headlight. As shown in picture:

# LED High-Beam Headlight for Polaris Sportsman XP

ZP-YJ-030501-011

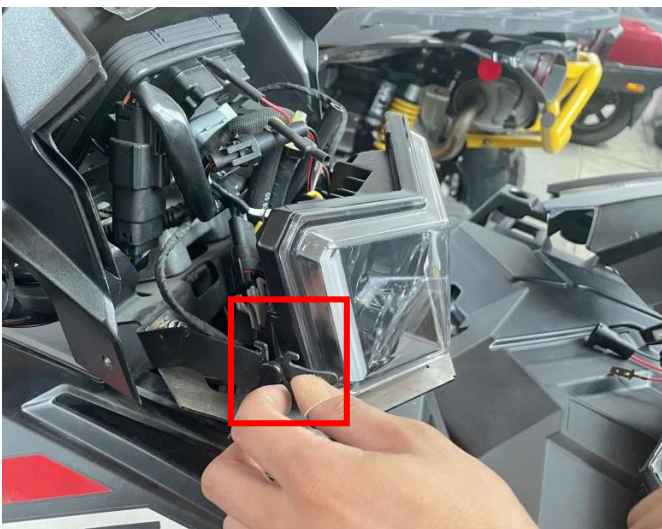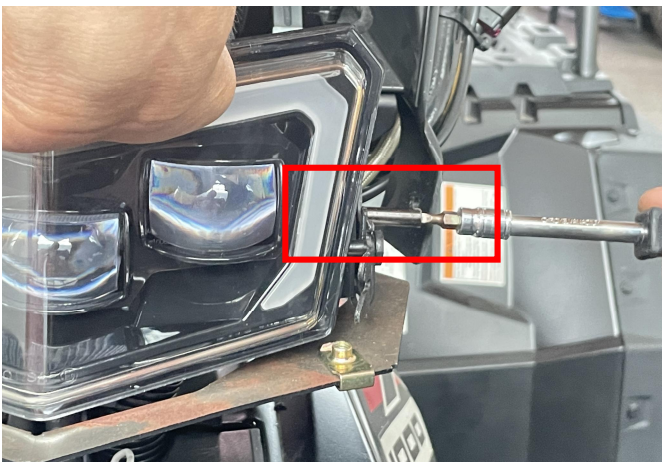

4. Install back the decoration cover of high-beam headlight, as shown in the picture:

5. Installation complete!

