

Handguards with Mount Brackets Kit for Polaris Snowmobile



ZP-YJ-030503-111

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT


This is Handguards Kit exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product picture



3. First assemble the matching mounting brackets in the product on the handguards (distinguish between the left and right sides to avoid installation errors). As shown in the picture:

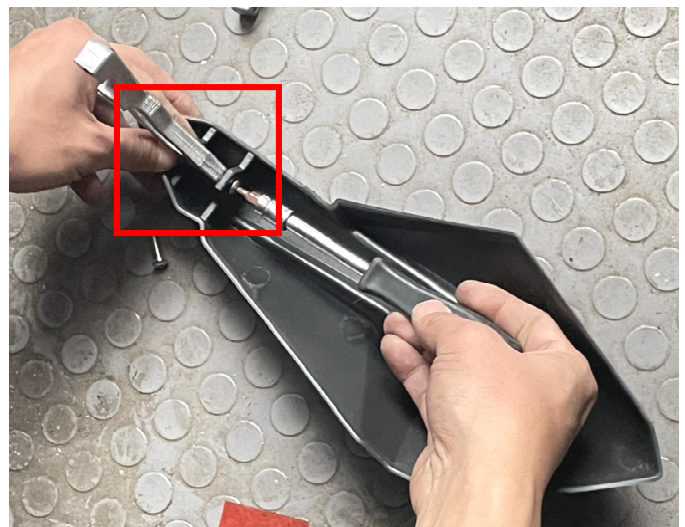


4. Install the assembled handguard on the lever of the snowmobile control direction, and use a semi-arc bracket and screws to fix the handguard (do not tighten the screw first, adjust the handguard to the appropriate height before tightening the screw). The other handguard can be installed in the same way. As shown in the picture:

Handguards with Mount Brackets Kit for Polaris Snowmobile

ZP-YJ-030503-111

SAUTV5[®]

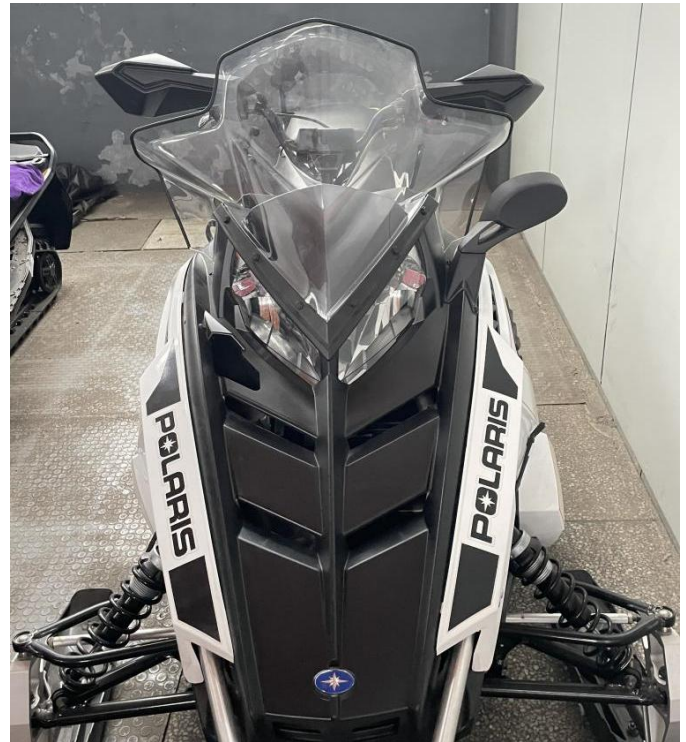

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.

5. Installation finished.