

Radiator Fan Shroud for Polaris Sportsman 850

ZP-YJ-030503-112

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This Radiator Fan Shroud is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Product picture



3. Remove the seat cushion, front storage platform and front bars of the original vehicle. As shown below:



4. Unscrew the screws on the front bar frame, remove the electrical box and power supply cover on the frame, and remove the frame. As shown below:

Radiator Fan Shroud for Polaris Sportsman 850

ZP-YJ-030503-112





5. Remove the fan bracket of the original vehicle (remove the coolant pipe in advance), and then remove all the accessories from the original bracket and install them on the new fan bracket. As shown below:



Radiator Fan Shroud for Polaris Sportsman 850

SAUTV5®

ZP-YJ-030503-112

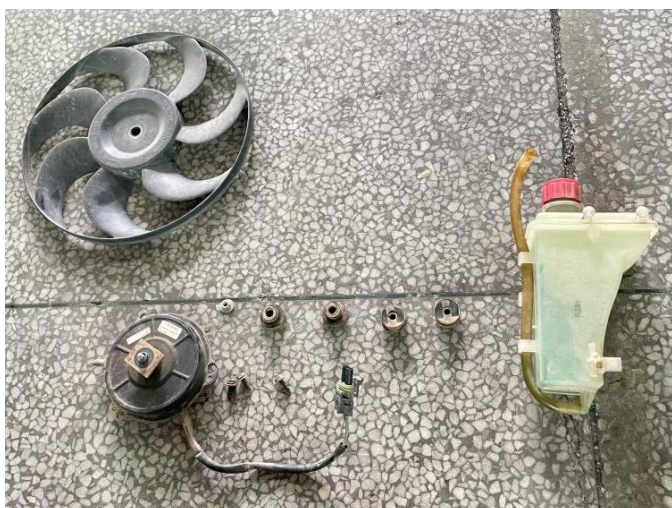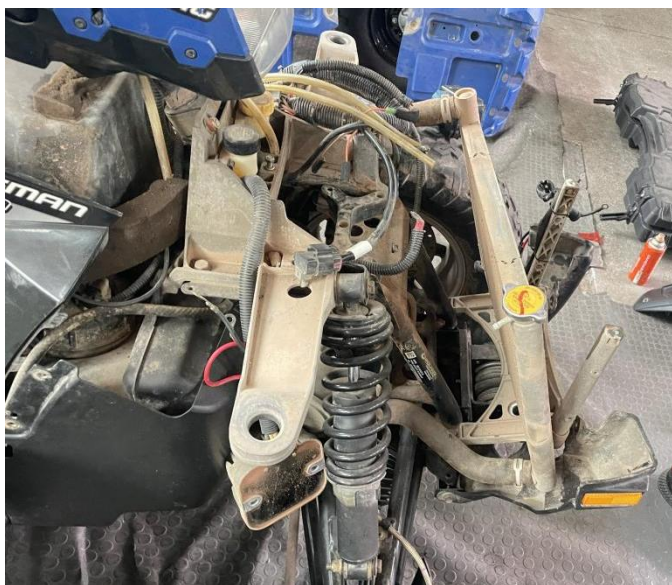

6. Install the new fan bracket back to the original vehicle, and then install all the removed parts back to their original positions. As shown below:

7. Installation finished.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.