

SMART PHONE CRADLE KIT FOR CAN AM OUTLANDER

ZP-YJ-030603-035



BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT


Your SMARTPHONE CRADLE KIT is exclusively designed for your Outlander. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove the gauge support as follows.
 - 2.1 Unclip the two lateral clips and the central clip near the gauge.

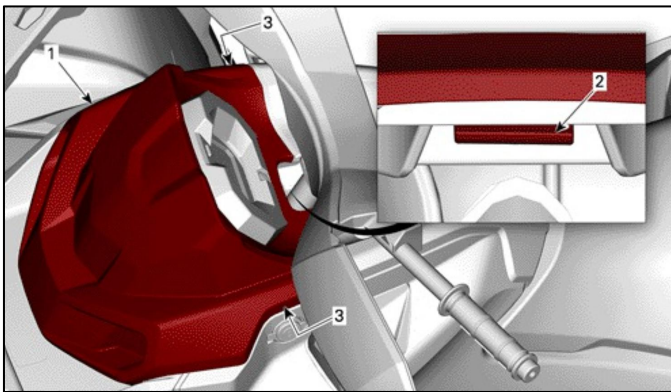


- 2.2 Pivot and remove the gauge support.

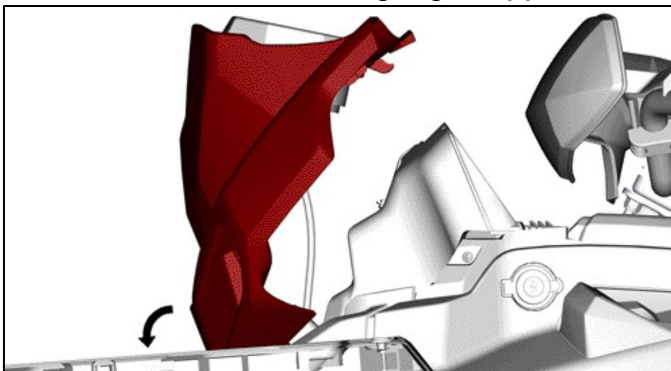


NOTE: The gauge stays mounted on the gauge support except for XT-P and Limited models.


- 2.3 Disconnect the indicated connector to release the gauge from the vehicle.

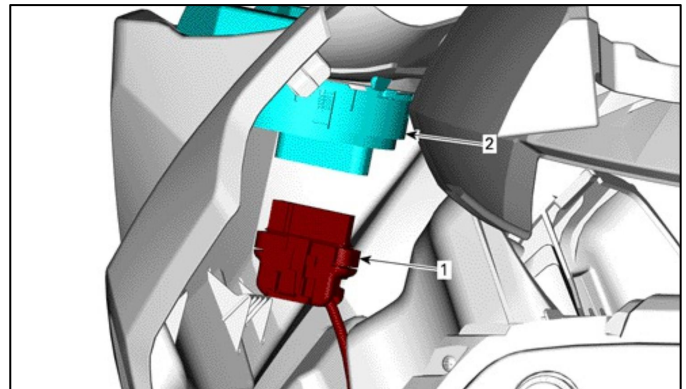

3. Smart phone Cradle Kit Installation.
 - 3.1 Position the smartphone support assembly on the gauge support as illustrated below.

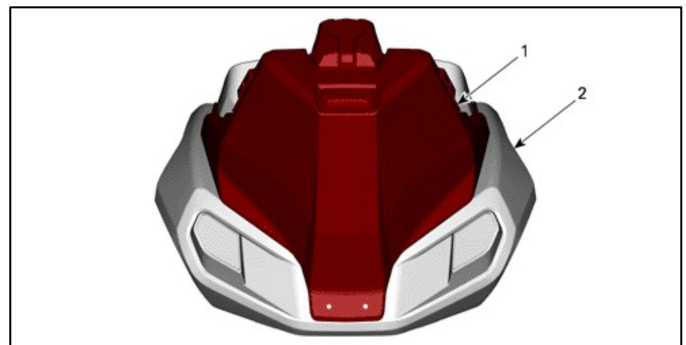

- 3.2 Using the smartphone support assembly as a template, drill four 5mm (3/16 in) mounting holes.


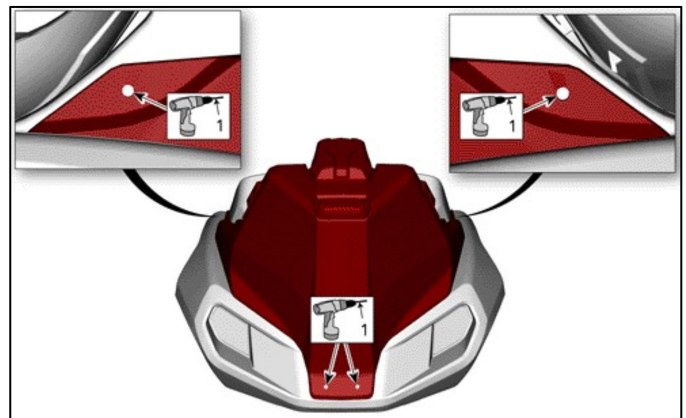


SMART PHONE CRADLE KIT FOR CAN AM OUTLANDER



ZP-YJ-030603-035

3.3 Secure the smartphone support assembly on the gauge support using four 3/16 pop rivets and four washers.

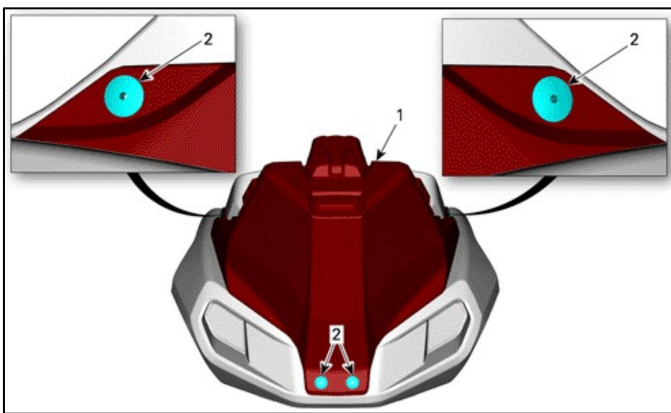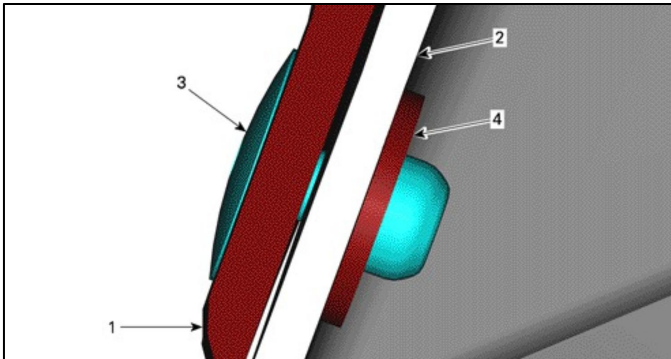

4. Reinstall the gauge support into place

4.1 The installation is the reverse of the removal procedure, however, pay attention to the following.


- Reconnect the gauge connector, if needed.
- Make sure the clips are correctly in place, specifically the central clip.

4.2 If the clips holding the gauge support into place are worn out, secure the gauge support as follows.


(1) Place the gauge support into place using the worn out clips. and, using template C, drill two 8 mm (5/16 in) mounting holes.

NOTICE

Be careful not to drill too deeply to prevent damaging internal components. While drilling, hold both the gauge support and the console panel from the opening next to the steering column.

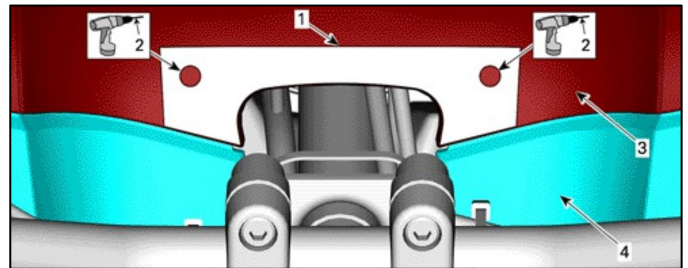

(2) Secure the gauge support into place using two plastic rivets.

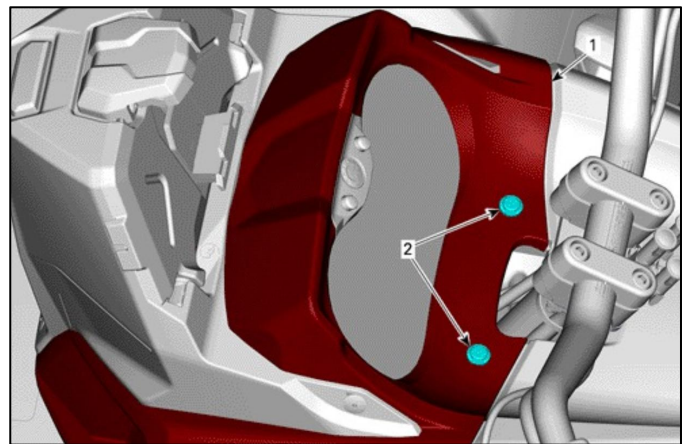

5. Adjustments

Use the thick and/or thin neoprene foam to optimize phone height adjustment. Make sure to only use one neoprene foam at each location so the hook height is not exceeded.

