

BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The Spare Tire Carrier Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTRUCTIONS

KIT CONTENTS

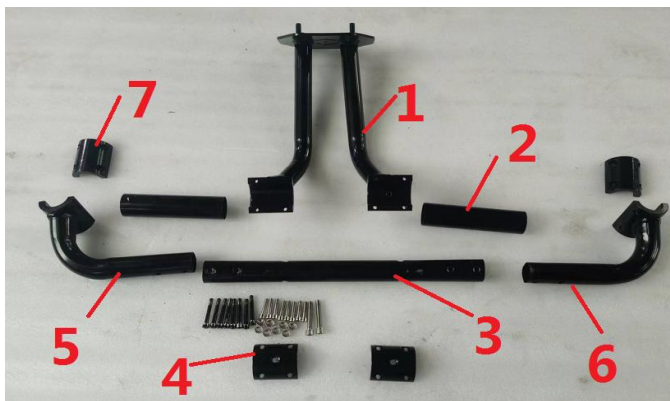


INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Assemble parts 1, 3 and 4 with two M10*70 inner hexagon screws, eight M8*35 inner hexagon screws.



3. Assemble parts 2, 5 and 6 with eight M8*55 inner hexagon screws, eight M8 locknuts.

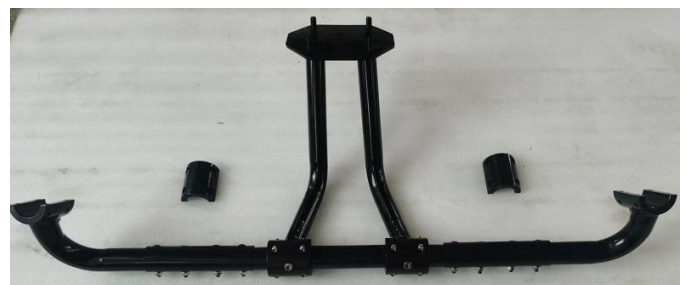

4. Fix the spare tire carrier on the rear frame with eight M8*55 inner hexagon screws.



5. After adjusting the position of the spare tire carrier, tighten the screws and the installation is completed.

