

# REAR CENTER ACCENT LIGHT FOR POLARIS RZR XP

ZP-YJ-030502-027



## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.


## IMPORTANT

The Accent Light is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

## INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Pictures of products and accessories:

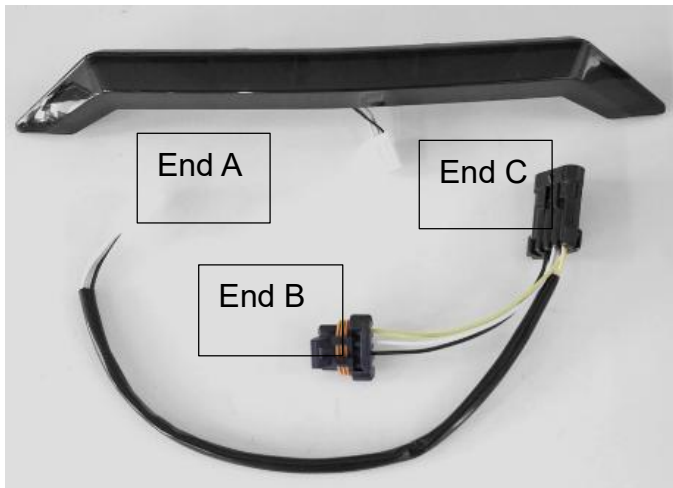

2. Remove the rear bumper of the original vehicle and disconnect the taillight wiring harness of the original vehicle. As shown in picture:



3. Pass the wiring harness of the rear accent light through the mesh grill of the rear bumper, and fix the rear accent light with a small "L" shaped bracket. As shown in picture:



# REAR CENTER ACCENT LIGHT FOR POLARIS RZR XP

ZP-YJ-030502-027



4. Take out the patch cord in the package. Connect end A with the plug-in of rear center accent light wiring harness, connect end B with the plug-in of the original vehicle taillight wiring harness, connect end C with the plug-in of the vehicle wiring harness, and finally install the rear bumper back. As shown in picture:

5. Installation complete.

