

SIDE MIRRORS KIT

ZP-YJ-030503-003



BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

IMPORTANT

This product is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into PARK. Turn key to OFF position and remove from vehicle.
2. Place clamp ③ on A pillar, and left hand mirror ① within clamp as shown. Put binding post receiver ④ into clamp and mirror base as shown. Hold receiving post immobile to hand-tighten binding screw ⑤.

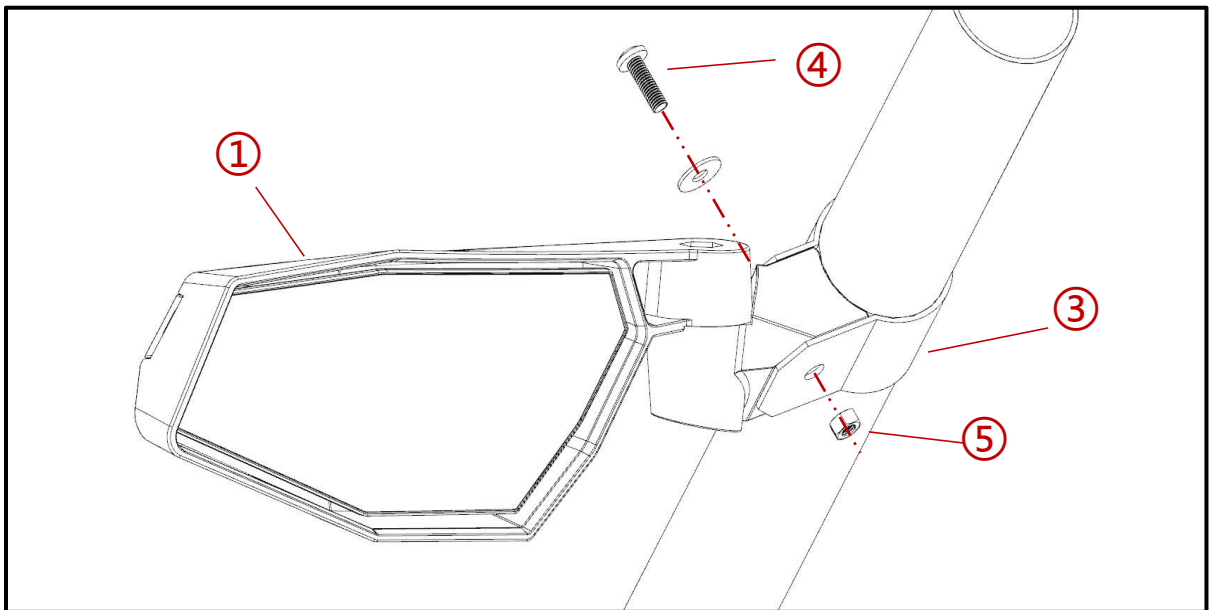

3. Position mirror at eye level when seated in vehicle. Use torx® to hold binding post receiver ④ immobile, then tighten binding screw ⑤ to specification.
4. Repeat steps 2-3 for opposite side.