

# DOOR SPEAKER PODS FOR POLARIS RZR 1000

ZP-YJ-030503-043



## BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT

This door speaker pods is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Peel off the double sided tape backing.

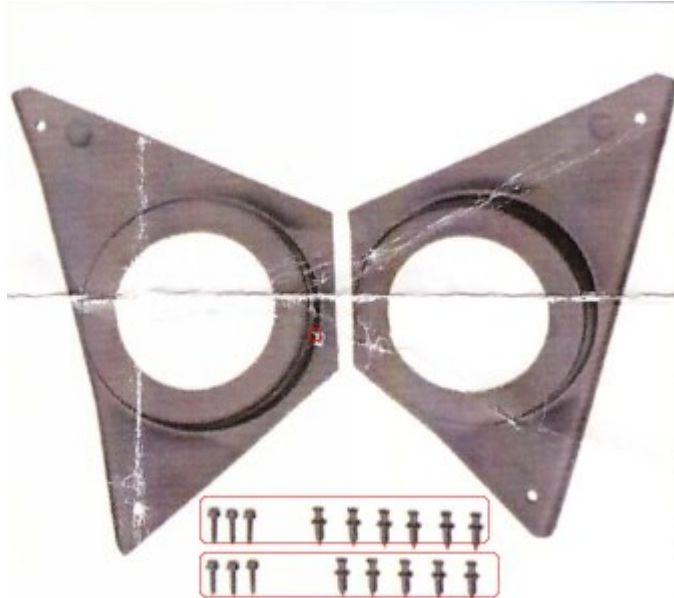

3. Stick it to the door and attach the top to the stock holes with two plastic rivet.



4. Using the self tapping screws and a cordless drill with a 3/8' nut driver. Run the screws through the pre-drilled holes in the pods going through the plastic and into the metal door frame. OR go straight to step 5.



5. Using a 5/16" diameter drill bit. Drill through the pre-drilled holes and the metal door frame. Then insert the remaining plastic rivets into the holes.
6. Install your speakers into your 6-1/2" speaker of choice pods.
7. You have a choice of using the self tapping screws or additional plastic rivets to secure the bottom of the pods.