## Plastic Hard Roof for Polaris RZR XP 4 1000

#### ZP-YJ-030507-003




#### **BEFORE YOU BEGIN**

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## **IMPORTANT**


This PLASTIC HARD ROOF is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

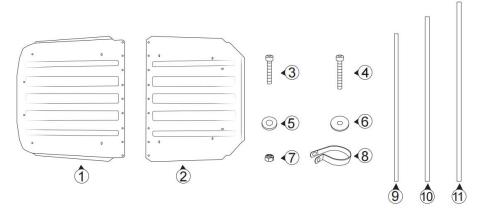


1. Front Roof Panel	x1
2. Rear Roof Panel	x1
3. M6*25 Screw	x9
4. M6*30 Screw	x12
<ol><li>Metal Washer</li></ol>	x42
6. Rubber Washer	x21
7. Nut	x21
8. Clamp	x8
9. Foam Pad- 1	x2
10. Foam Pad- 2	x4
11. Foam Pad- 3	x4

## INSTALLATION INSTRUCTIONS


- 1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
- 2. Remove two original factory screws A and U-nuts B, set them aside for reuse.

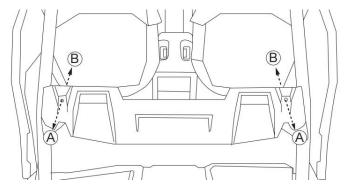

3. Assemble front roof panel ① and rear roof panel ② with nine M6\*25 screws ③, eighteen metal washers ⑤, nine rubber washer ⑥ and nine nuts ⑦.

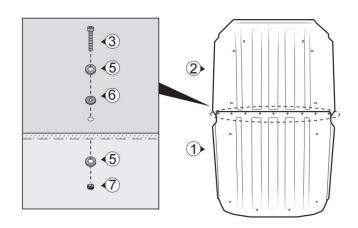

4. Place assembled roof ①② on the roll cage, loosely secure its anterior part with two original factory screws [A] and U-nuts [B] first.

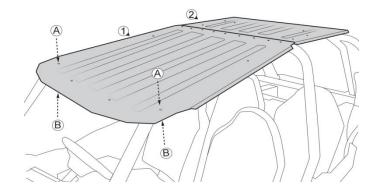


# Plastic Hard Roof for Polaris RZR XP 4 1000


# ZP-YJ-030507-003




5. As shown, Set eight clamps (8) under eight mounting holes of the assembled roof panel (1)(2). After determining the positions of the clamps, remove the assembled roof panel and stick foam pads to the roll cage.

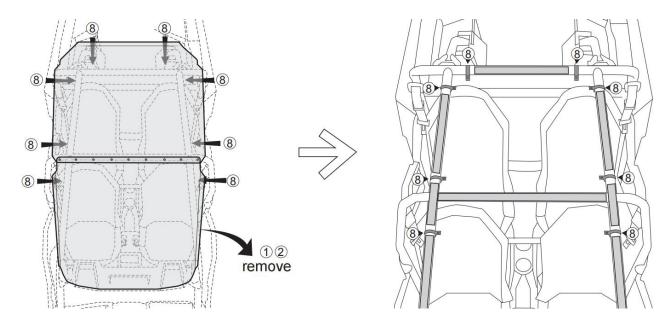

6. Reinstall the assembled roof 12 on the roll cage with two M6\*30 screws 4, two rubber washers 6, four metal washers 5, and two nuts 7.

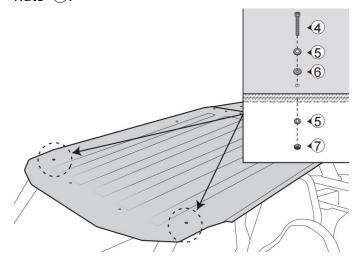

7. Use our supplied accessories to fix the assembled roof panel ①② to eight positions on the roll cage. As shown, for each mounting hole, use one M6\*30 screw ④, two metal washers ⑤, one rubber washer ⑥, one nut ⑦ and one clamp ⑧ to install.

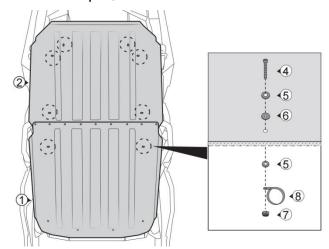


# Plastic Hard Roof for Polaris RZR XP 4 1000

# ZP-YJ-030507-003



8. Drill two holes on the roof panel based on the two mounting holes C of the assembled roof panel ①②. For each mounting hole, use one M6\*30 screw ④, two metal washers ⑤, one rubber washer ⑥ and one nut ⑦ to install.

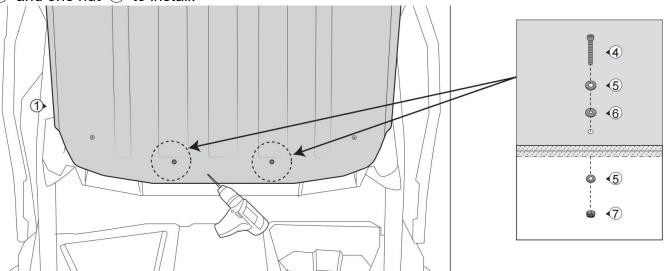

9. Finish installation.