

FENDER FLARES KIT FOR CAN-AM DEFENDER

ZP-YJ-030603-026



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

Your FENDER FLARES KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Drill location holes on front fender by 3mm twist pistol drill.



3. Fix the front fender flare to the front fender by 5X40 self-tapping screws.




4. Refer to the holes on front fender flare, and drill installation holes on front fender by 3mm twist pistol drill. Then, fix front fender flare to vehicle by 5X40 self-tapping screws.



5. Drill location holes on rear fender by 3mm twist pistol drill.




6. Fix the upper rear fender flare to rear fender by 5X40 self-tapping screws.

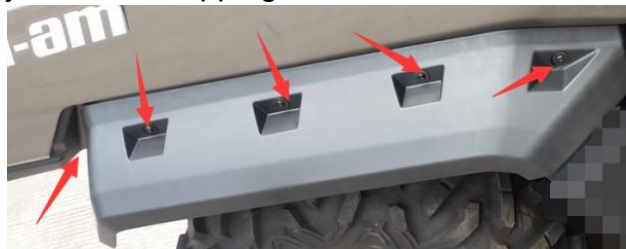

7. Place the lower rear fender flare on the front of rear wheel, and mark the positions of installation holes on the rear fender, then drill the holes by 6.5mm and 12.5mm pistol drill.

FENDER FLARES KIT FOR CAN-AM DEFENDER

ZP-YJ-030603-026

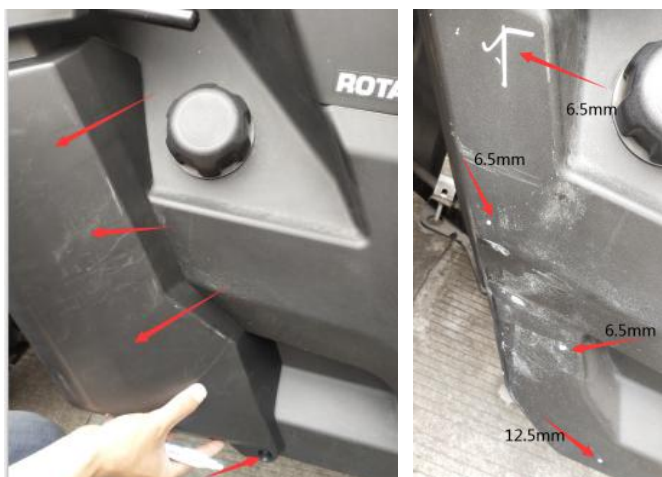

10. Finish the installation of rear flare fender.

8. Insert the rubber plugs with clip to the 12.5mm installation holes.



9. Fix the lower rear fender flare to vehicle by M6x25 and M6x30 screws.

