

FRONT ROOF LINER FOR CAN-AM DEFENDER

ZP-YJ-030603-041



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This FRONT ROOF LINER is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Refer to the figure below to assemble the bracket accessories.



3. Clamp the U-nut on the bracket.




4. Fit the brackets of step 3 with the two holes on both sides of the roof bracket as shown in the figure below, and fasten them with screws.
Note: The direction of the arrow on the bracket is upward. Install the other side with the symmetrical bracket in the same steps.



5. Install the bracket assembled in step 2 to the middle of the roof bracket. And align the hole pointed by the red arrow with the hole on the frame. Fasten with screws.

Clamp the steel card in the accessory kit on the bracket (red circle position).

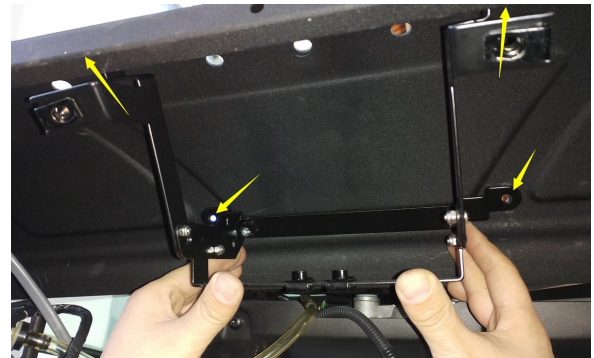

6. Install the roof liner on the iron bracket and fasten it with screws.

