

Front Mesh Grill with LED Light for Can Am Commander 2021

ZP-YJ-030603-099



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

Your Front Mesh Grill Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTRUCTIONS


Installation

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.


1. Prepare the mesh grill and the hardware as shown.




2. Remove the seat cushion of the driver's cab and the outer decoration plate of the gear control box, as shown in the picture.

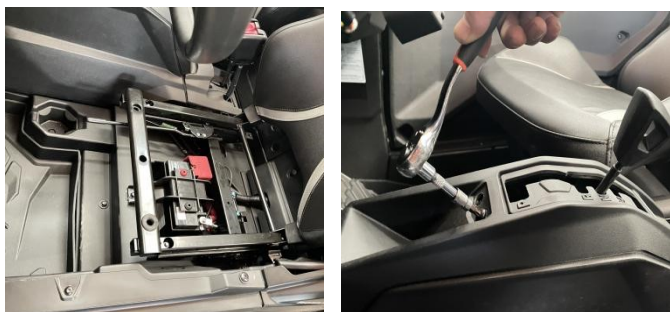

3. Find the round black waterproof plug below the accelerator pedal and remove the plug.

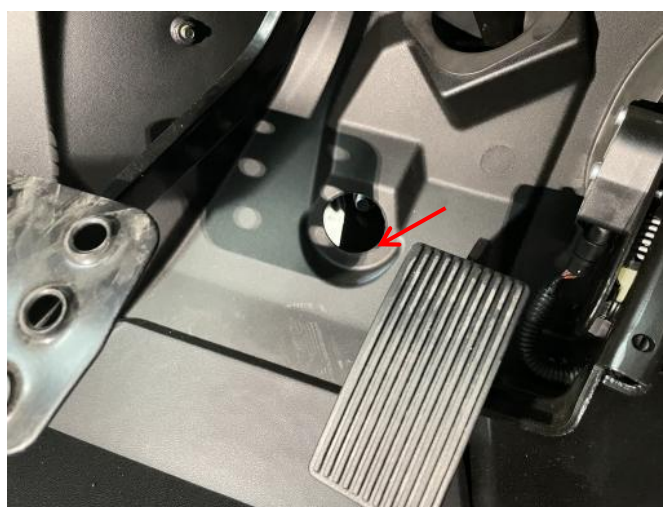

4. Untie the prepared white wire harness, take one piece of wire, peel off the skin of one end, expose the copper wire inside, and connect it to the negative electrode junction of the battery, as shown in the picture:

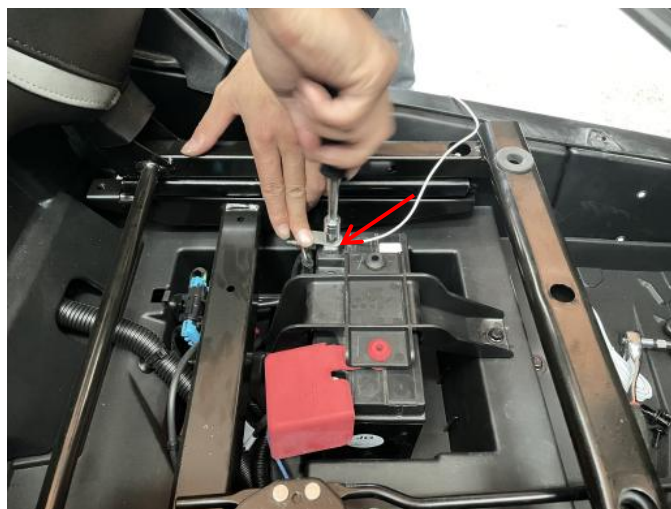

5. After connecting the negative wire, through the wire harness out from the hole under the accelerator pedal, and hide the exposed wire along the edge of

Front Mesh Grill with LED Light for Can Am Commander 2021


ZP-YJ-030603-099



the gear box, and then put back the decorative plate of the gear box , as shown in the figure.



6. Find the electrical box on the left of steering wheel, take off the outer protection cover, pull up the red pin in the lower left of the electrical box, take another white wire, peel off the skin of one end, reveal the copper wire, to connect with the place where just pull up the red pin, press the red pin back after connecting ,through the rest of the line out from the hole under the accelerator pedal (refer to the picture of above step) : as shown in the figure

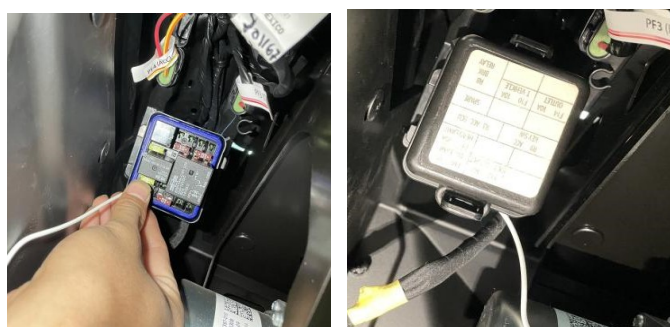

7. Unplug the connector of the wiring harness of the lamp, find the two white wires through the hole under the accelerator pedal, and connect them with the wiring harness on the lamp, the wiring harness on the battery is negative, connect the black wire, and the wiring harness on the electrical box is positive, connect the gray wire. Insulation measures should be

taken at the place where the wiring is connected, as shown in the figure:



8. The connected wire harness is routed to the position of the front middle net. The excessive wire can be fixed along the line direction outside the car ,to prevent falling, as shown in the figure:



9. The last step is to install the lamp and connect the connector. Installation finished. As shown in the figure:

