

Spare Tire Carrier Holder for Can Am Maverick X3

ZP-YJ-030603-107



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

The Spare Tire Carrier Holder Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

INSTRUCTIONS

KIT CONTENTS




INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Assemble parts 1 and 2 into bars with eight M8*50 inner hexagon screws, eight M8 locknuts and two parts 5 (installation direction reference picture).



3. Fix part 3 to the bar through part 6 with eight M8*25 and two M10*60 inner hexagon screws.

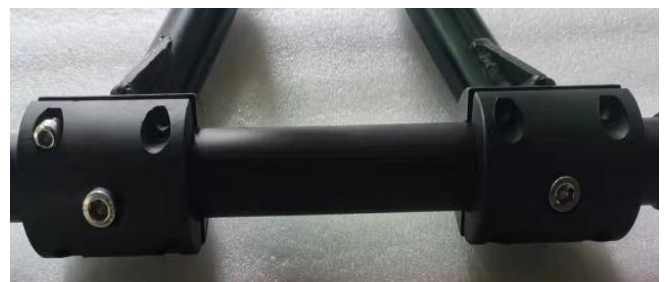

4. Fix the spare tire rack on the rear frame with four M8*70 inner hexagon screws, four M8 flat pads and four M8 locknuts.

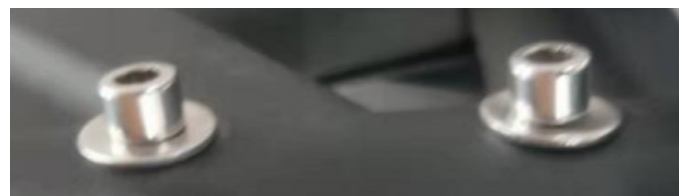

Spare Tire Carrier Holder for Can Am Maverick X3

ZP-YJ-030603-107



5. Installation complete.