

# Combined Roof Kit for Can-Am Defender

ZP-YJ-030607-003



## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT


This COMBINED ROOF KIT is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS


1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Paste the seal in the red line position.



3. Use self-tapping screws to fix the front and rear pieces of the roof together. The self-tapping screws shown in red circles (located on both sides of the roof) do not need to add flat pads.

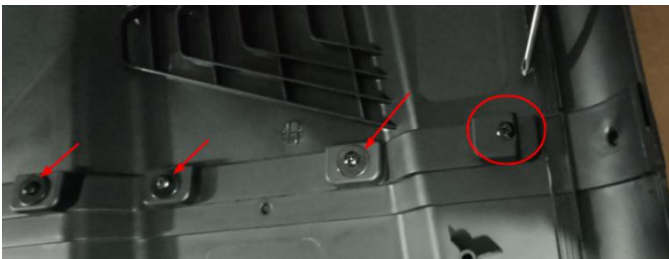

4. After the combination of the roof, the six positions in the red circle painted with bolts and nuts fastened to further strengthen. The middle of the four nuts without flat pads below.

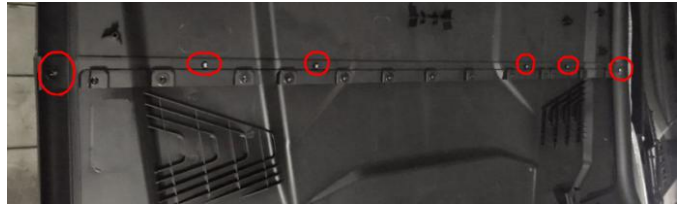

5. Roof assembly completed.



# Combined Roof Kit for Can-Am Defender



ZP-YJ-030607-003





6. Install the assembled roof on the iron frame as shown in the figure.



7. Install the 4 pieces of M8 large spacers and screws as shown in the figure.

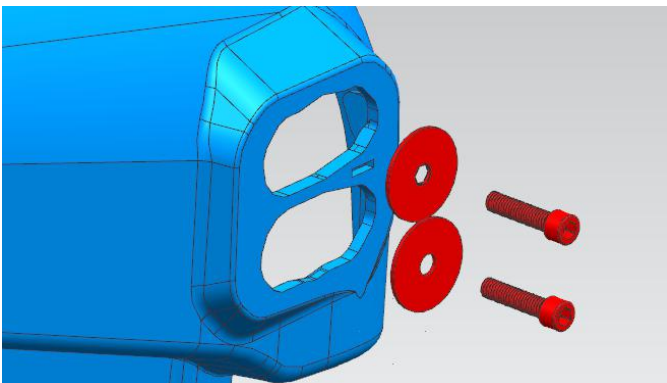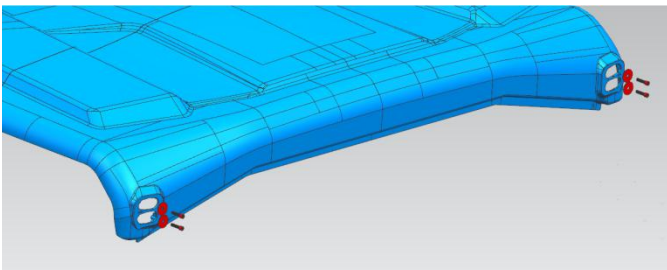

8. Install the U-nuts, spacers and screws one by one in the order shown in the figure.

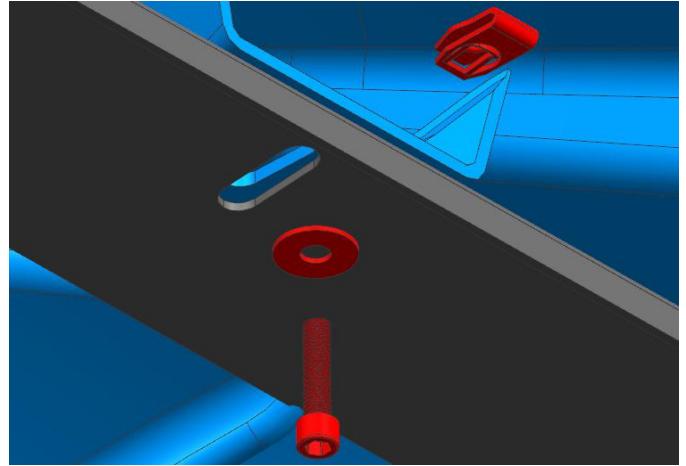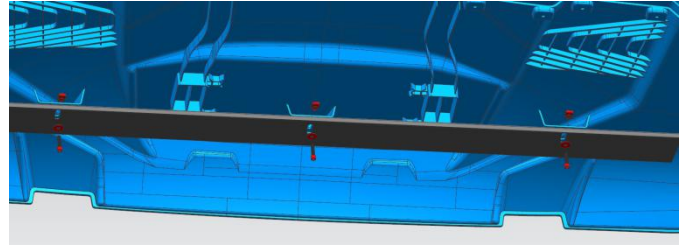

9. Roof installation completed.

