

Rear Bumper for Can Am Maverick X3

ZP-YJ-030606-002




BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

KIT CONTENTS

REF	PART DESCRIPTION	QTY	REF	PART DESCRIPTION	QTY
1	Outer hexagon screw(M10*70)	2	7	Self-locking nut(M12)	2
2	Inner hexagon screw(M10*50)	4	8	Flat pad(M6)	4
3	Inner hexagon screw (M8*16)	8	9	U-shaped nut(M6)	2
4	Inner hexagon screw (M6*20)	4	10	Clamp	2
5	Self-locking nut(M6)	2	11	Decorative board	1
6	Self-locking nut(M8)	4	12	Assembling parts	2

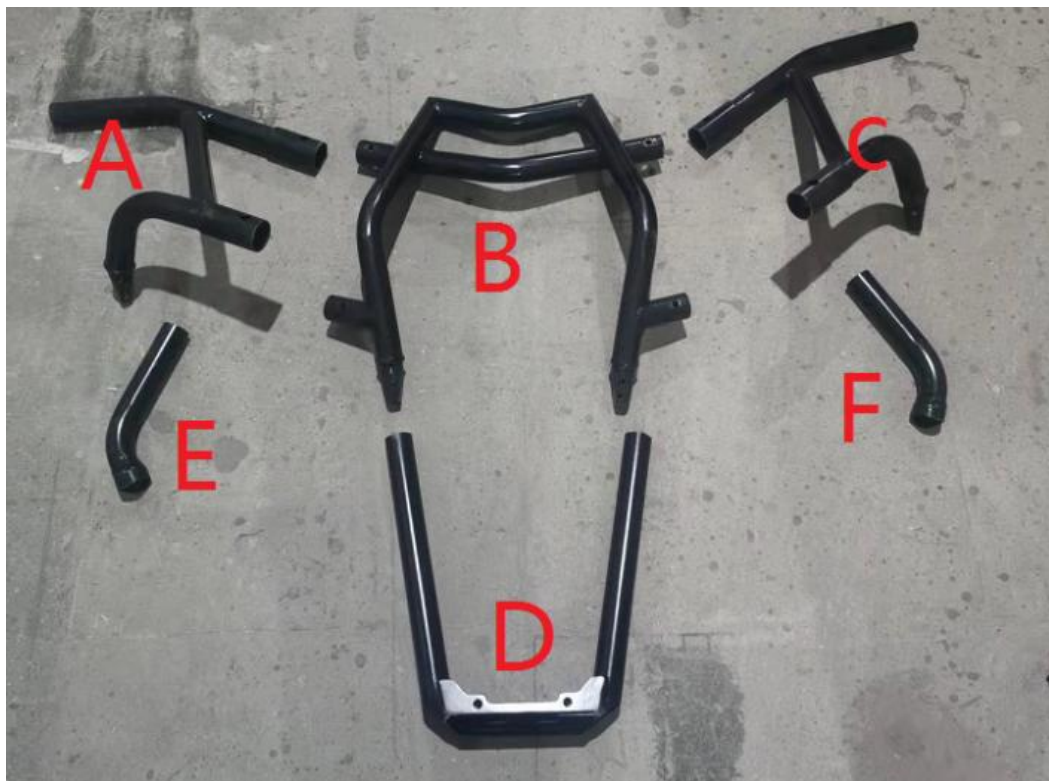

IMPORTANT

This Rear Bumper Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.

Rear Bumper for Can Am Maverick X3

ZP-YJ-030606-002



INSTALLATION INSTRUCTIONS

ACCESSORY INSTALLATION

1. Connect part E and part F with part A and part C respectively to assemble part A1 and part B1 with four M8*16 inner hexagon screws.



2. Connect parts A1, B1 and B with four M8*50 inner hexagon screws and four M8 locknut.



3. Assemble part C1 and part D with four M8*16 inner hexagon screws.



THE REAR BUMPER INSTALLATION

1. Install the assembling parts on the frame with the hexagon screw(M10*70), don't tighten the screw.



2. Install the bumper on the rear frame with 2 self-locking nut(M12).

Rear Bumper for Can Am Maverick X3

ZP-YJ-030606-002



3. Install the decorative board on the bumper, secure the bottom with 2 inner hexagon screws (M6*20) and 2 self-locking nuts (M6), U-shaped nuts (M6) fixed on the clamp as shown in the picture, then install the decorative board with 2 inner hexagon screws (M6*20).