

# EPIC HOOD FOR CAN-AM RYKER

ZP- YJ-030603-080



## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT


This Epic Hood is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Remove the hood of the original car.



2. Align the clip on the hood with the mounting hole on the vehicle body.

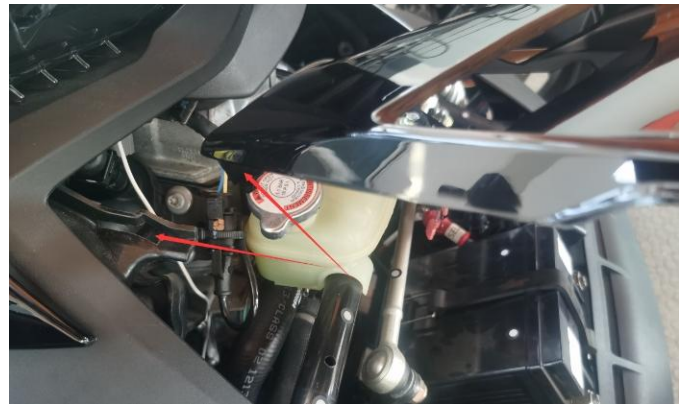

3. Push the hood in the direction of the arrow to install it.

# EPIC HOOD FOR CAN-AM RYKER

ZP- YJ-030603-080

