

# FENDER FLARES FOR CAN AM MAVERICK X3

ZP-YJ-030603-021



## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.



## IMPORTANT

Your FENDER FLARES is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS



1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Install the left hand side fender flares.
  - (1) Left Front Fender Extension (2.1)
  - (2) Left Center Fender Extension (2.2)
  - (3) Left Rear Fender Extension (2.3)

- 2.2 Install the Left Center Fender Extension. Place the fender flare in place shown in the figure below, locate the drill locations, drill and fix with screws.

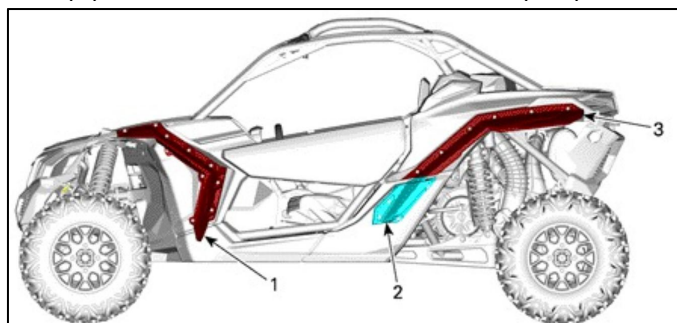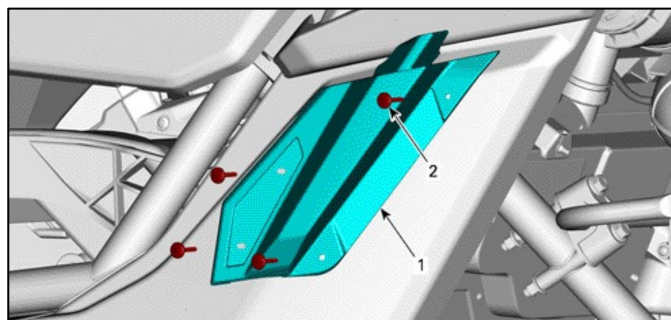

- 2.1 Install the Left Front Fender Extension. Place the fender flare in place shown in the figure below, locate the drill locations, drill and fix with screws.

- 2.3 Install the Left Rear Fender Extension. Place the fender flare in place shown in the figure below, locate the drill locations, drill and fix with screws.

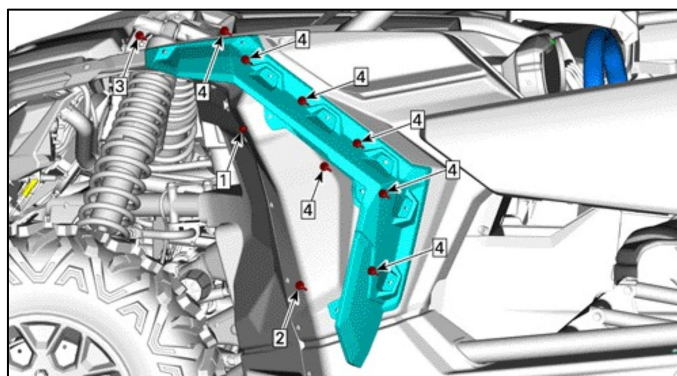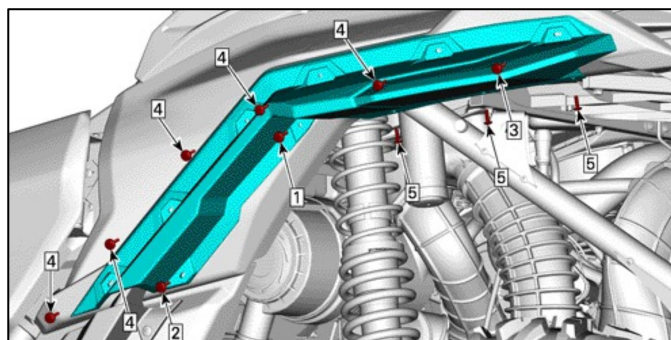

- 3 Repeat procedure for the right hand side, and finish the installation.