

Gauge Cover for Can-Am Spyder F3

ZP-YJ-030603-097

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

This Gauge Cover is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS


1. Kit Contents



2. Remove the screws on both sides of instrument panel for standby.



3. Install the equipped shaft on the support frame, fix it with screws, and clamp the protective cover on the shaft.

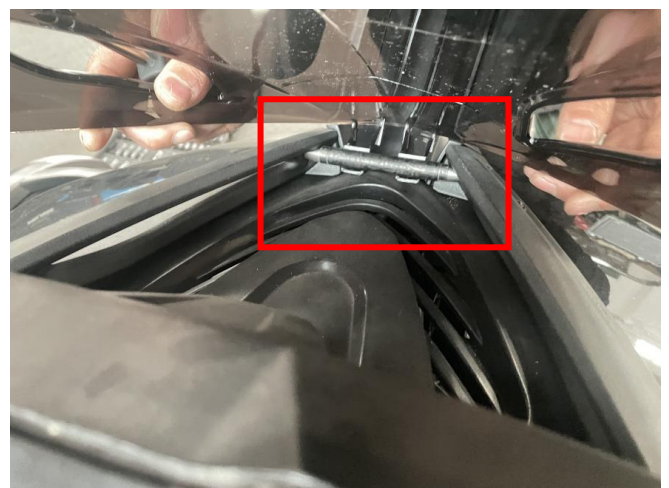

Gauge Cover for Can-Am Spyder F3

ZP-YJ-030603-097



4. The other end shall be fixed with the original car screw removed before (an aluminum pad shall be added before the screw is fixed).

5. Installation completed.

