

# ELECTRONIC DEVICE HOLDER FOR MAVERICK TRAIL

ZP-YJ-030603-025



## BEFORE YOU BEGIN


Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT

Your ELECTRONIC DEVICE HOLDER is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Remove the rocker switch bracket as illustrated below.

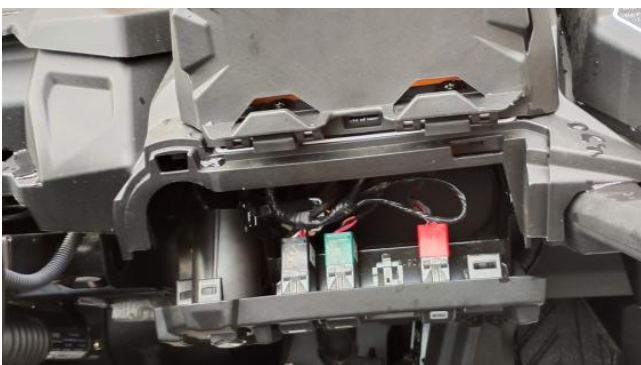

3. Open the cover of the device holder, and let the surface on the shell (red arrow) to be aligned with the surface on the dashboard (yellow arrow).




4. Hold in place and counter-drill with a 6.5mm drill bit. Use M6X20, M6 flat washer, and lock nut to fix the device holder on the dashboard.  
NOTE: Do not tighten the screws now.



5. Hold in place and counter-drill with a 4mm drill bit. Use 6.5x30 self-tapping screws to fix the device holder on the dashboard.  
NOTE: Pay attention to STEP3 when tightening the screw, and it can't be offset. After the screws are tightened, tighten the screws of STEP4.

# ELECTRONIC DEVICE HOLDER FOR MAVERICK TRAIL

ZP-YJ-030603-025

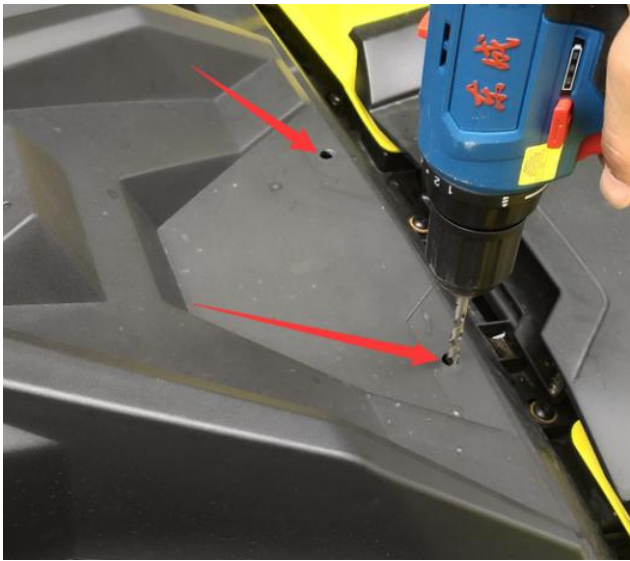

6. Installation finished.

