

# LED HEADLIGHT KIT FOR POLARIS SLINGSHOT

## BEFORE YOU BEGIN



Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT

This LED Headlight Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

## INSTALLATION INSTRUCTIONS

1. Assemble the headlight mounting bracket together.

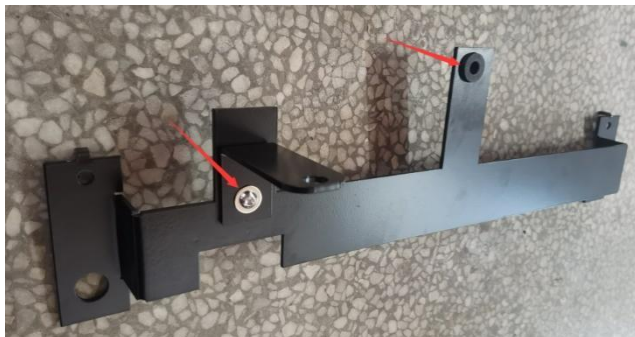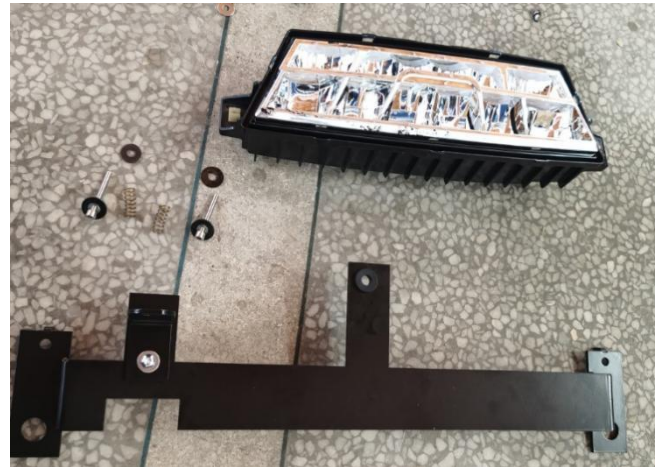

2. Install the headlight on the bracket and insert the pin below the headlight into the rubber plug.



3. Remove the connecting pieces of the original car and reserve the screws.



4. Install the light bracket assembled in step 2


# LED HEADLIGHT KIT FOR POLARIS SLINGSHOT

at the position shown in the figure and fix it with the screws in step 3.




5. Take power from the original headlight harness through the adapter cable.

**Note:** For models 2019 and up, it is only necessary to plug the conversion wire of the headlight with the headlight wire of the original vehicle, and replace the decorative cover in front of the headlight with the decorative cover in the accessory bag.

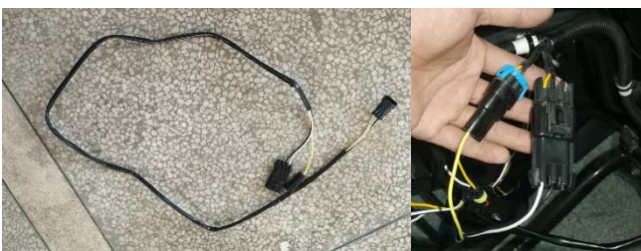

## Replace the headlight front trim panel of models before 2019:

1. Remove the hood and remove all the holding screws on the back of the hood.

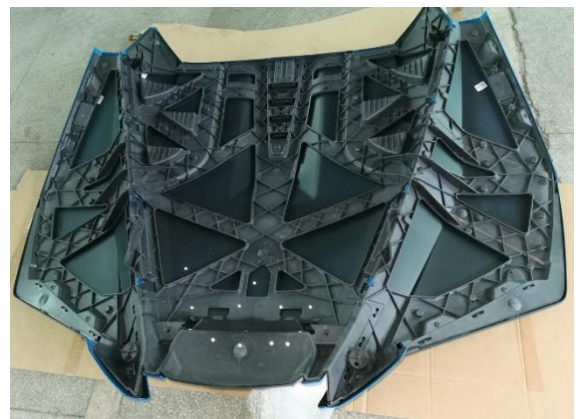

2. Remove the skeleton under the hood and replace the trim panel indicated by the arrow.



3. Put the hood back on.

# LED HEADLIGHT KIT FOR POLARIS SLINGSHOT

---

