

Combined Aluminium Roof for Polaris General 4 1000



ZP-YJ-030507-021

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This Aluminium Roof is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Product picture.



2. Assemble part 1 and part 2 with 7 Screw – Torx Truss Head, M6 x 25 mm, 7 Washers, and 7 Rubber gaskets as shown in the figure.



3. Assemble part 3 and part 4 with 7 Screw –

Torx Truss Head, M6 x 25 mm, 7 Washers, and 7 Rubber gaskets as shown in the figure.



4. Assemble part A and part B with 7 Screw – Torx Truss Head, M6 x 25 mm, 7 Washers, and 7 Rubber gaskets as shown in the figure. Glue foam strips on both sides of the top, as shown in the picture.



Combined Aluminium Roof for Polaris General 4 1000




ZP-YJ-030507-021

5. Install M6 buckles on the left and right positions of the frame as shown in the picture. Attach the front end of the aluminum roof to the frame by using two M6*40 screws, M6 flat washers and rubber gaskets. As shown in figure.



7. Install the two ends of the aluminum roof on the frame by using eight screws of M6*30, M6 flat washers, rubber gaskets, 4 iron brackets on the left side and 4 iron brackets on the right side, as shown in the figure.

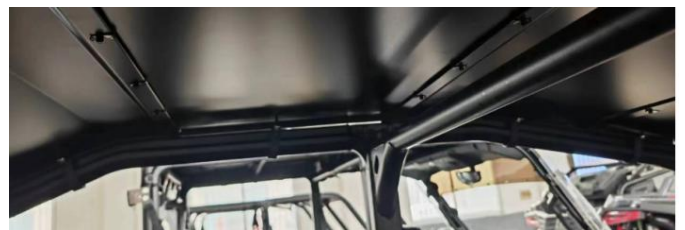

6. Attach the tail of the aluminum roof to the frame with two M6*30 screws, M6 flat washers, rubber gaskets and two iron brackets, as shown in the picture.



8. The installation is complete.



Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.