

BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted. Please retain these installation instructions for future reference.

IMPORTANT

This Radiator Fan Shroud is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

INSTALLATION INSTRUCTIONS

- 1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
- 2. Product picture



3. Open the original engine cover and remove the front bar. As shown below:





4. Disconnect the wiring harness plug-in of the fan of the original vehicle, unscrew the fan bracket of the original vehicle, and remove the fan bracket. As shown below:

Radiator Fan Shroud for Polaris RZR XP 1000

ZP-YJ-030503-113









5. Remove the fan and other accessories from the original bracket and assemble them on the new bracket in the same position. Use nylon cable ties to secure the cable harness of the







Radiator Fan Shroud for Polaris RZR XP 1000


ZP-YJ-030503-113





6. Install the assembled new fan bracket back on the vehicle, fix it with the original vehicle screws, and then reconnect the fan wiring harness with the vehicle wiring harness plug-in. As shown below:



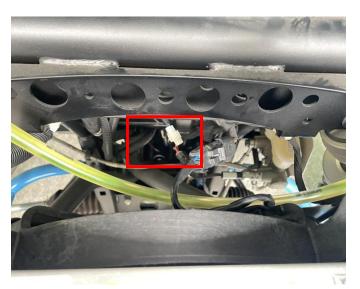

7. After the installation, the front bar and the cover can be installed back to the original position. As shown below:





8. Installation finished.

Note: Please refer to the installation video in the Amazon listing before your installation, or contact the seller for the installation video.