

Roof Ram Air Kit for Polaris RZR XP 1000

ZP-YJ-030503-077



BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

Your Roof Ram Air Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris. For your safety, and to ensure a satisfactory installation, perform all installation steps correctly in the sequence shown.


INSTRUCTIONS

Installation

Note: Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

1. Remove the middle part of the drilling template. Find the center line of the aluminum roof. And attach the drilling template to the aluminum roof. Pay attention to the forward and backward directions when placing.

Note: The front and rear positions of the drilling template on the roof are determined according to the actual situation of the roof frame.

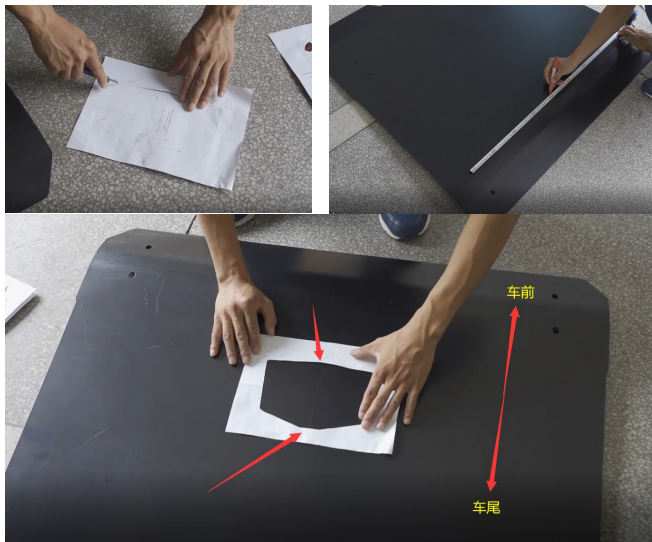

2. Fix the drilling template on the roof with adhesive tape. Open and drill holes by specialized cutting tools and drilling tools.



Attention: Wear personal protective equipment when working. Use a 5mm drill bit when drilling holes.


3. The effects after Step 2.



4. Remove the screws from the vent on the aluminum roof and reserve.



5. And place the plastic bracket into the hole of the aluminum roof. Fix it to the roof with self-tapping screws.

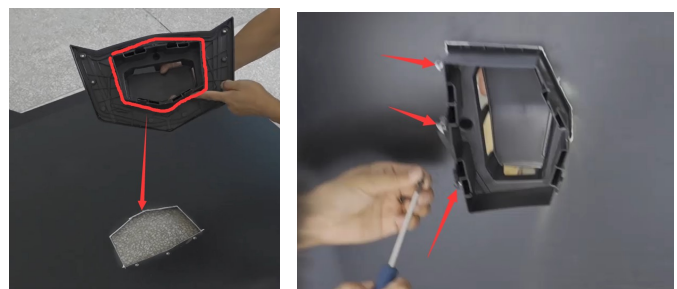

Roof Ram Air Kit for Polaris RZR XP 1000

ZP-YJ-030503-077




6. Drill the aluminum roof at the arrow position with a 5mm drill bit.

Note: When performing this step, do not place the aluminum roof directly on the ground to avoid damaging the plastic bracket.



7. After the operation of Step 6, remove the plastic bracket and clean the aluminum roof.

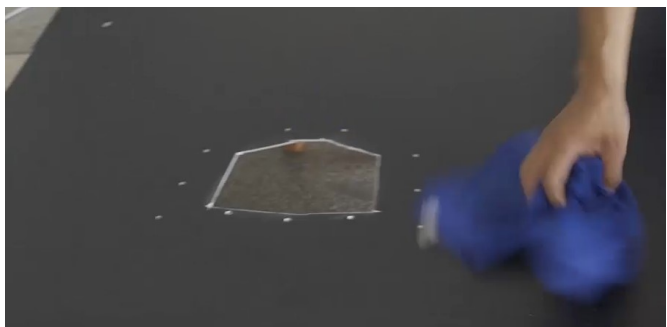


8. Attach the sealing strip to the vent bracket.



9. Install the bracket with the sealing strip on the roof.



10. Clamp the top cover of the vent, and then install the vent onto the aluminum roof by screws.

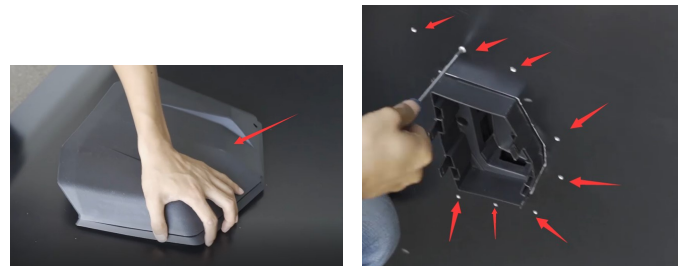

11. Install the filter screen onto the bracket.



12. Install the rubber baffle on the front position of the vent cover.

Roof Ram Air Kit for Polaris RZR XP 1000

ZP-YJ-030503-077



13. Install the air outlets on the bracket. Installation finished.

