

Lower Door Trim Panels for Polaris RZR PRO R

ZP-YJ-030509-014




BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

IMPORTANT

These Door Trim Panels are exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

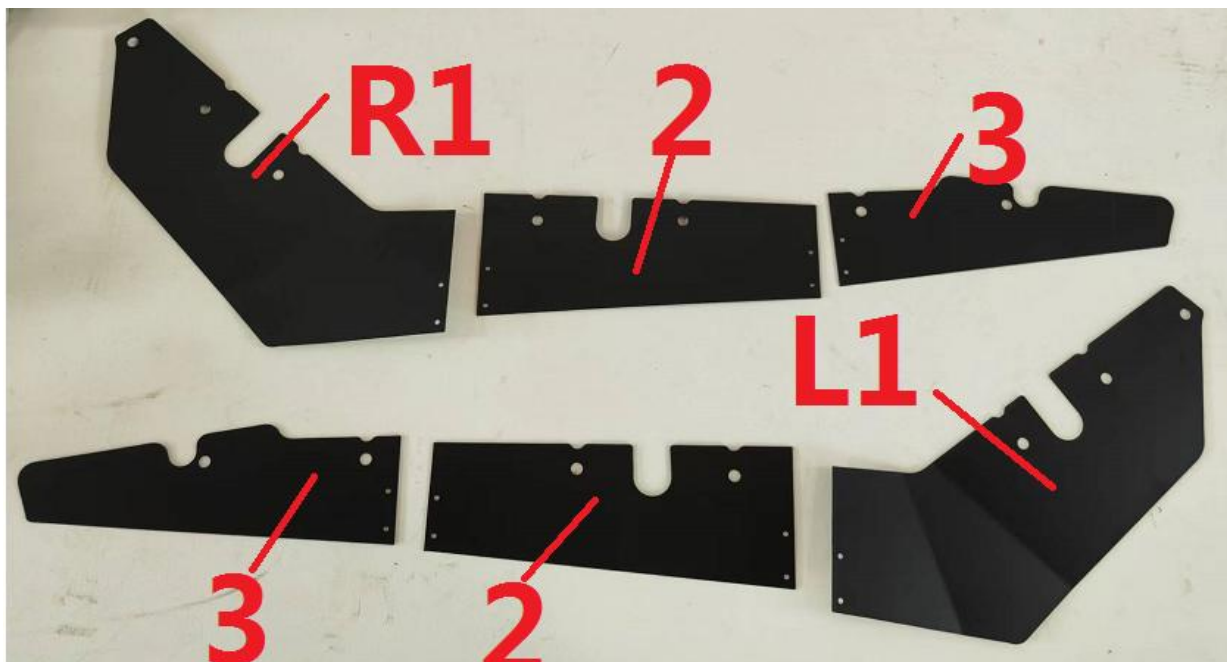

INSTALLATION INSTRUCTIONS

1. Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.
2. Assemble parts R1, 2 and 3 into the right door fender and assemble parts L1, 2 and 3 into the left door fender, with 8PCS M3*8 inner hexagon screws, 8 PCS M3 gaskets and 8 PCS M3 nuts.



3. Install the door fender with 7 plastic clips as shown in the picture.



4. Installation finished.