


INSTALLATION INSTRUCTIONS

Suitable for Model: 2015-2017 RZR-S 900/RZR-S 1000,etc.

Tips: Before reading this instruction,make sure you've obtained related spare parts and installation kits.Please keep the related reference manual after mounting.

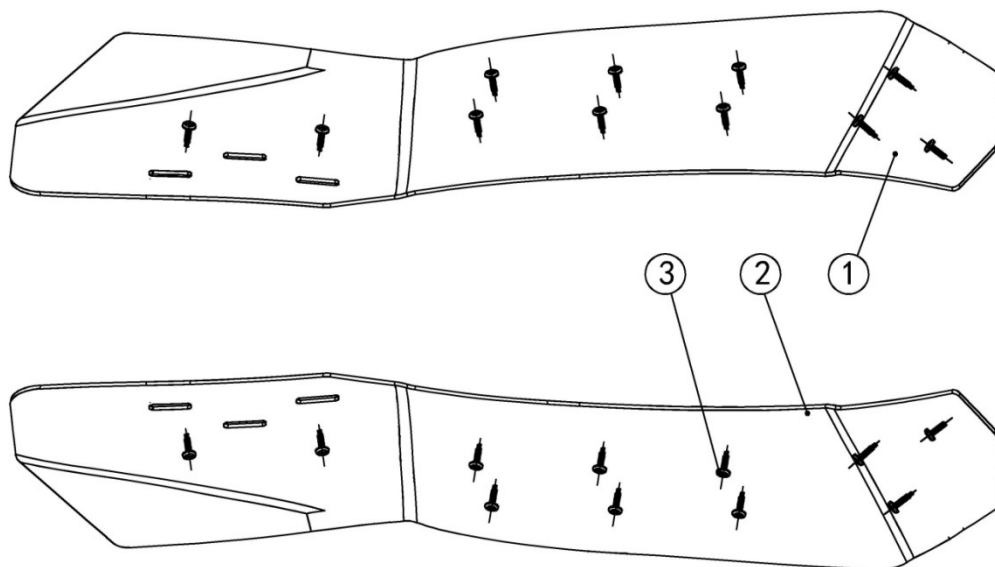

Accessories(for Front):

No.	Name	Quantity
1	Front Mud Flap-L	1
2	Front Mud Flap-R	1
3	Phillips Self-drilling Tapping Screws(Black Coating)ST4.2x19	22

Tools Needed(for Front):


Safety Goggles


Cross Screwdriver

Steps:

1. Park your car in safety and turn the key to "OFF".Map the holes of mud flap onto the jaw of the car(see the red box on the right diagram),then twist the tapping screws to the corresponding position(see the red circle on the right diagram).

Diagrams:

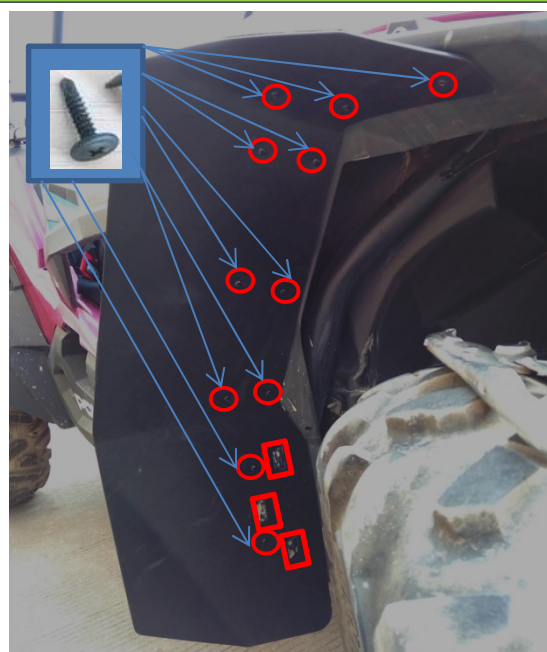

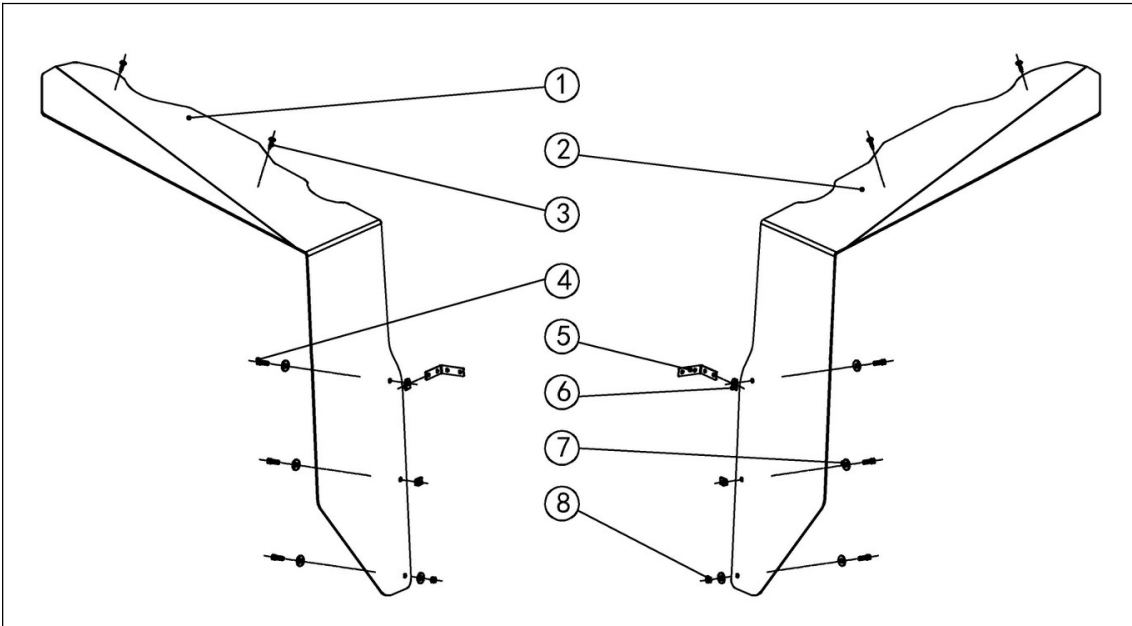

Accessories(for Rear)

No.	Name	Quantity
1	Rear Mud Flap-L	1
2	Rear Mud Flap-R	1
3	Phillips Self-drilling Tapping Screws(Black Coating)ST4.2x19	4
4	Fillister Head Hexagon Socket Screws(Black Coating)M6X25	6
5	L-Shaped Holders	2
6	U-Shaped Nuts	4
7	Flat Washers(ϕ 20x ϕ 8x2)	8
8	Lock Nuts (M6)	2

Tools Needed(for Rear):



- Safety Goggles
- Cross Screwdriver
- Slotted Screwdriver

Steps: | Diagrams:

1. Park your car in safety and turn the key to "OFF".Remove the expansion screws snap fastener on original rear wheel fender with slotted screwdriver.





2. Remove the screws on original rear wheel brow(see diagram 1),and mount the L-shaped holder to the inner side of rear wheel brow(see diagram 2),the mounting screws are the original screws you removed just now. Then connect U-shaped nut to the L-shaped holder(see diagram 3).Please choose the hole on the holder as per your vehicle model.

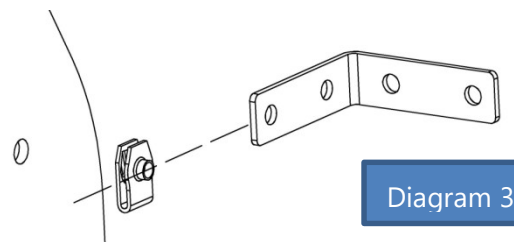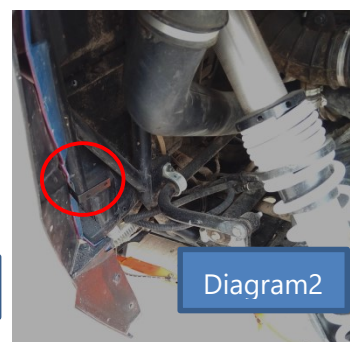

3. Mount the U-shaped nut to the vehicle(see the position in red circle on the right diagram).



4. Map the three open holes separately onto the holes that come into being in step 1 and step 2, and twist the fillister head hexagon socket screws (black coating) M6X25. (see diagram 1 & diagram 2 on the right)

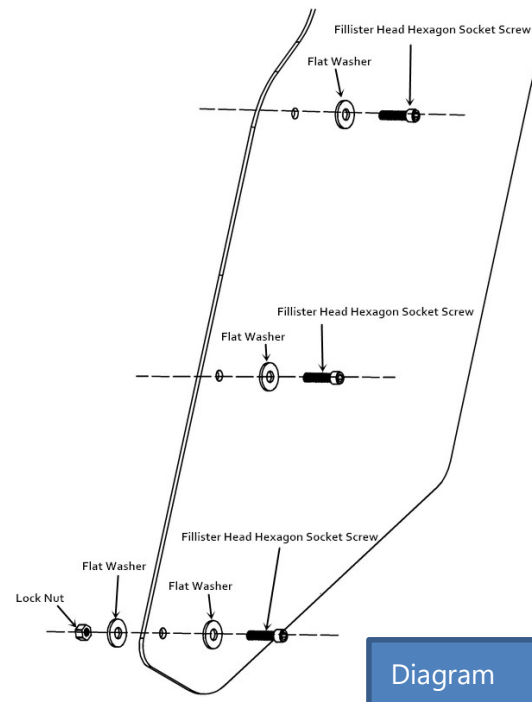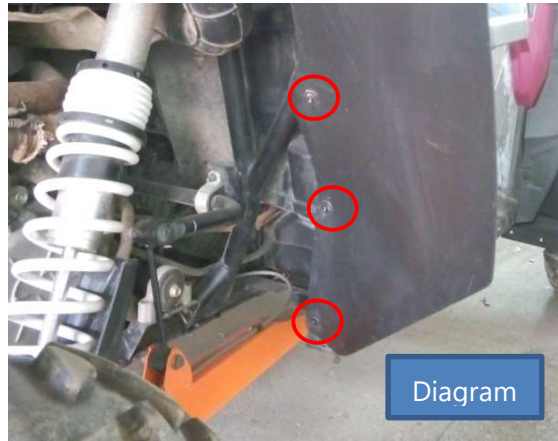

5. Fix the upper part of rear mud flap to the wheel brow. Fix the whole mud flap from top to bottom with phillips self-drilling tapping screws (black coating) ST4.2x19 (see the fix position on the right diagram). Tips: For better installation, you can fix the mud flap and wheel brow in a proper way in advance (be careful to prevent scratches).

