

# Fog Lights Cover with LED DRL Turn Signal Light Kit for Can-Am Spyder F3



ZP-YJ-030602-016

## BEFORE YOU BEGIN

Read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference.

## IMPORTANT

This Fog Lights Cover with LED DRL Turn Signal Light Kit is exclusively designed for your vehicle. Please read the installation instructions thoroughly before beginning. Installation is easier if the vehicle is clean and free of debris.

**Note:** Shift vehicle transmission into "PARK". Turn key to "OFF" position and remove from vehicle.

## INSTRUCTIONS

### Installation

1. Remove the fog lamp cover of the original vehicle.



2. Remove the original rearview mirror, and separate the plugins.



3. Remove this guard board of original vehicle .





4. Put the wire through the mounting hole of the fog lamp cover; Insert the plug of the lamp wiring harness (as red arrow) into the plug of the original vehicle wiring harness (as blue arrow).



5. Put the other plug of the lamp wiring harness (as red arrow) through the mounting hole of the rearview mirror, and insert it into the plug of the rearview mirror (as blue arrow) .

# Fog Lights Cover with LED DRL Turn Signal Light Kit for Can-Am Spyder F3

ZP-YJ-030602-016

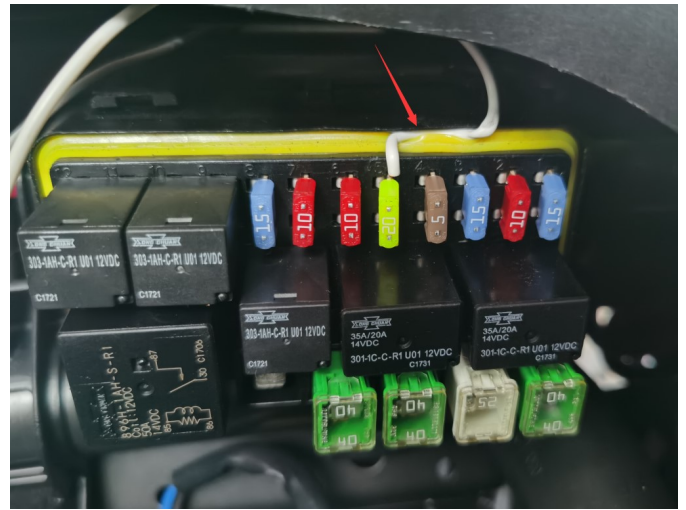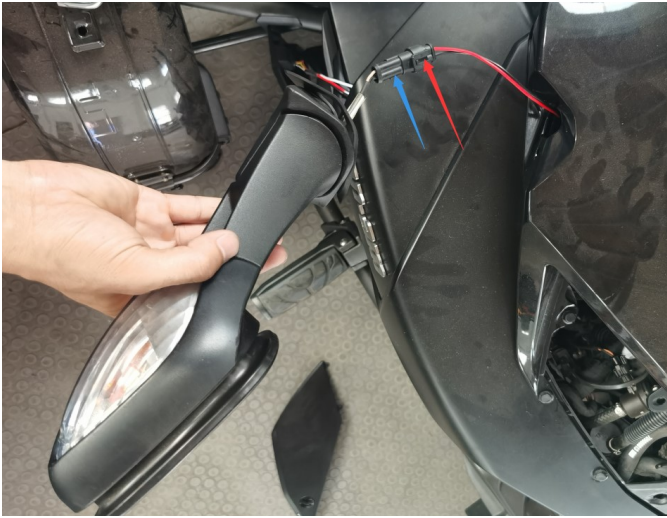

6. Use the white wire to connect from the red arrow position of the fuse in the ACC control box, and connect this white wire to the white wire of the fog lamp cover, to ensure the insulation.

7. Installation finished.



Remark: In order to avoid being cutting off of the wiring, you can route the wire from ACC control box as the picture.